

## Service & Warranty

- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- For your convenience, record the complete Model/Type Number (located on the Product Identification Plate) and the date you received the product below, and attach your purchase receipt docket as proof of purchase.
- To ensure your product is covered by warranty, the complete faulty product together with your purchase receipt should be returned to your retailer.

### ONE (1) YEAR LIMITED WARRANTY SAVE THIS WARRANTY INFORMATION

**EHS (International) Ltd.** guarantees this product free from defects in materials and workmanship for a period of one (1) year.

Should this unit be operated under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, this will render **WARRANTY VOID**. The product you buy may sometimes differ slightly from illustration.

Should you have a problem with this product, please contact to our Service Desk, Tel: 0870 742 5021.

**EHS, Manchester, M17.1RN**



# WARM MIST HUMIDIFIER

## MODEL WG-S40



**THANK YOU FOR CHOOSING THIS EHS  
PRODUCT. BEFORE USING IT, PLEASE  
READ THIS INSTRUCTION MANUAL**

## Important Safety Instructions

When using any electrically powered product, basic safety precautions should always be followed, including the following:

**PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.**

**WARNING - to reduce the risk of fire, electrical shock or injury to persons or property:**

1. Great care must be taken when humidifiers are used in children's rooms. Do not allow the power cord to hang down where children can reach it. Keep the unit well back from the edge of tables so that it cannot be upset. Children should not be allowed to play with the packing materials used with this product.
2. Do not use this appliance near baths, washbasins or shower units.
3. If this appliance becomes immersed in water, unplug it before removal and do not reuse until it has been checked by an authorized service department.
4. The appliance must not be operated (disconnect the mains plug immediately) when:
  - the appliance, casing or cable is damaged.
  - the appliance shows visible signs of damage.
  - a fault is suspected after a fall or the like.
5. Disconnect the mains plug:
  - in case of faults during use.
  - before cleaning or moving the appliance from place to place.
  - after use.
6. Never pull the plug out of the socket with wet hands.
7. Never carry nor pull the appliance by the flex.
8. Do not bend the flex or wind it around the appliance.
9. Only use extension leads after having made sure that their condition is faultless.
10. Do not run the cable under a carpet or rug. Arrange the cable so that it is located out of those areas used most frequently, and in such a way that no one can trip over it.
11. Never put the appliance on hot surfaces or near open flames. Lay the flex so that it does not touch hot or sharp-edged objects.
12. Attention! The appliance is hot after it is switched off. Let it stand for a short time before it is moved. Do not operate the appliance in the open air.
13. Never fill hot water in the water tank.
14. Never add fragrant oils.
15. Position the appliance so that steam emitted does not damage wooden furniture or other items.
16. Never operate the appliance with any air opening blocked. Keep ventilation openings free from dust. Never drop or insert any object into any opening.
17. Only trained personnel should repair electrical appliances. Unskilled repairs

can cause considerable danger to the user.

18. If the connection cord is damaged, it must be replaced by the manufacturer, his after-sales services department or qualified person in order to avoid risks.

## BS Plug Wiring


**Wiring Instructions:** Should it be necessary to change the plug please note the wires in the mains lead are coloured in accordance with the following code :

**BLUE - NEUTRAL**

**BROWN - LIVE**

**GREEN AND YELLOW - EARTH**

 
As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

1. The **BLUE** wire is the **NEUTRAL** and must be connected to the terminal which is marked with the letter **N** or coloured **BLACK**.
2. The **BROWN** wire is the **LIVE** and must be connected to the terminal which is marked with the letter **L** or coloured **RED**.
3. The **GREEN/YELLOW** is the **EARTH** and must be connected to the terminal which is marked with the letter **E** or  or coloured **GREEN OR GREEN/YELLOW**.
4. Always ensure that the cord grip is positioned and fastened correctly.

If a **13A (BS 1363)** fused plug is used it must be fitted with a **3A** fuse. If in doubt consult a qualified electrician.


### Wiring for a 13 Amp Plug (BS1363)

Please note. The Earth Terminal is marked with the letter 

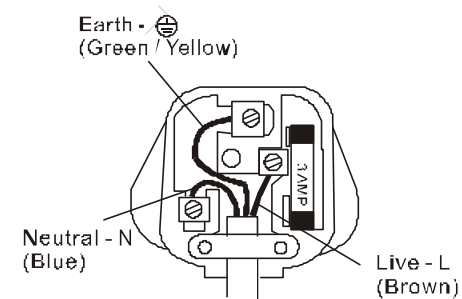

**READ & SAVE THESE  
IMPORTANT INSTRUCTIONS**

## Product Description

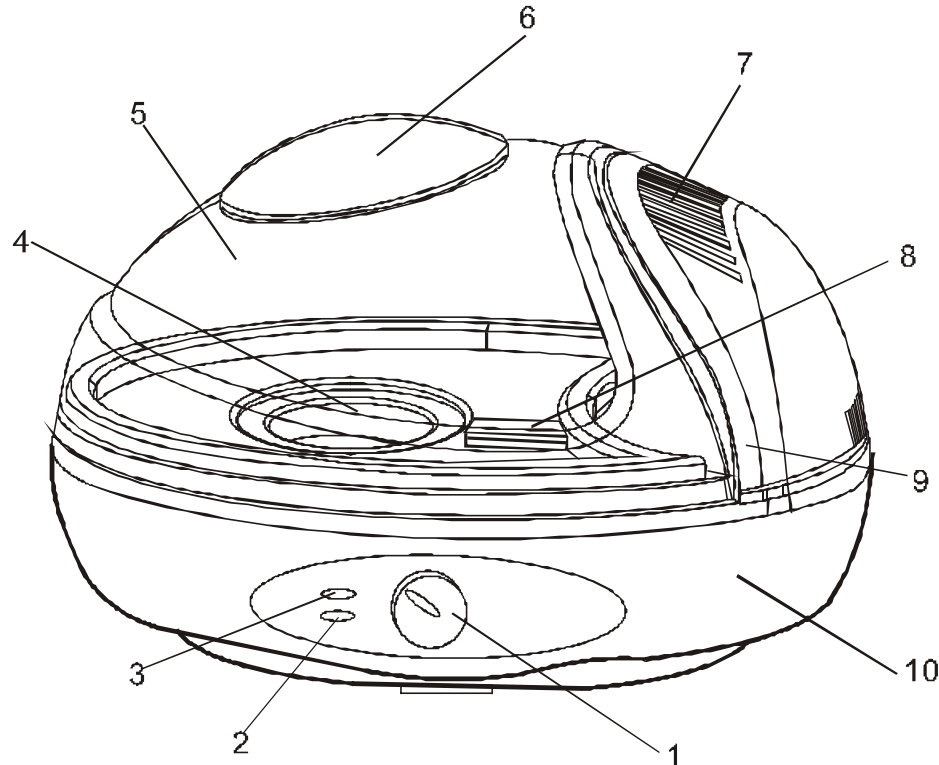 

1	ON/OFF Switch	6	Handle
2	Power Indicator Light	7	Steam Outlet
3	Operating Indicator Light	8	Water Pipe
4	Filling Hole Cap	9	Heating Element
5	Water Tank	10	Stand

## Pre-Operation Instructions

- Carefully remove your humidifier from the box (please save the carton for off-season storage).
- Make sure the unit is in the OFF position and water tank not empty before plugging into the outlet.
- Place on firm watertight level surface.

## CAUTION

- Please read the instructions carefully before using the humidifier.
- Please make sure that the humidifier is placed on a solid, waterproof surface. Do not allow the unit to come into contact with soft furnishings or polished wood surfaces..
- Turn off and plug must be pulled out of the socket while adding water or moving the humidifier.
- Do not immerse the unit in water.
- Cut off the power when the water tank is empty.
- Do not use hot water.
- Clean and de scale the unit regularly.

## Operation

### FILLING WATER

Disinfect the humidifier when you use the humidifier for the first time (please refer to the cleaning instructions)

- Turn off and unplug the humidifier.
- Lift water tank (5) from stand (10)
- Turn over the water tank (5) than open filling hole cap (4) of water tank (5) by unscrewing anti-clockwise and fill tank with clean cold water only.
- Close filling hole cap (4) by screwing clockwise.
- Turn over the water tank to upward. Make sure that it does not leak. Put water tank (5) back on stand (10)

### CONTROL PANEL

 


ON



POWER

Indicator  
Light

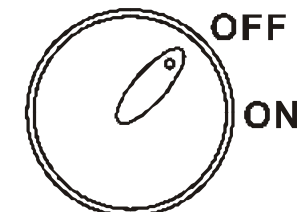

OFF

ON

Control  
Switch

## **TO OPERATE**

**CAUTION: Do not touch the socket when your hands are wet.**

1. Plug appliance into wall outlet (220-240V~), green POWER indicator light (2) comes on.
2. Start appliances with ON/OFF control switch, red operating light (3) comes ON.
3. Appliance operates after 2-3 minutes.
4. After use, switch off and unplug the unit.

**CAUTION: Steam is hot. Do not touch or block the steam outlet.**

## **AUDIBLE ALARM**

When water tank runs out than audible alarm will sound.

## **REFILL**

**Turn off and unplug the unit before refilling. The tank will need to be refilled after approximately 8 hours running.**

## **Maintenance**

### **CLEANING**

Always switch the appliance off and then remove the plug from the mains socket before cleaning. Clean only with a dry or damp cloth, if necessary moistened with a little washing liquid. Do not use any abrasives or detergents.

When necessary disinfect water tank with ordinary disinfectant.

### **DO NOT IMMERSE PRODUCT IN WATER**

### **DE-SCALING**

**De-scale the unit frequently using either a standard kettle de-scaler or diluted vinegar solution. Do not operate the unit whilst de-scaling is in process.**

**Caution:** Do not allow water to run into the interior of the humidifier as this could create a fire or electric shock hazard.

When storing protect the appliance against dust or dirt (packed in a plastic bag). Store the appliance in a cool and dry place.

## **Specification**

<b>Model</b>	: WG- S40
<b>Voltage</b>	: 220-240V~ 50Hz
<b>Power</b>	: 400W
<b>Water tank</b>	: 4.0L Capacity
<b>Spray Capacity</b>	: 430ml/hr



**NOTE: If you experience a problem, please return the product to your supplier with your warranty or proof of purchase. Do not attempt to pen the product. Doing so may void your warranty and cause damage to the product or personal injury.**

**If the supply cord is damaged it must be replaced by a qualified electrician.**