



Airius Model R20/EC Aisle Product Information Sheet




R20/EC-A-230V

Page 1 of 2

DIMENSIONS



PROPERTIES

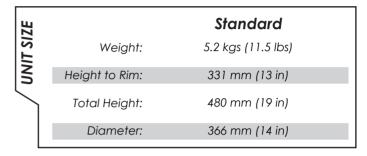

)R		230V
МОТО	Watts* @ 50 htz:	30
Σ	RPM* @ 50 htz:	1,650
	CFM* @ 50 htz (m3/hr):	620 (1,053)
	AMPS* @ 50 htz: *Motor data provided by mo	0.26 tor manufacturer and is subject to change at anytime

COVERAGE

Ceiling Height = 2.5m - 6m (0 - 22 ft)
 Diameter = Contact Airius
 Floor area = Contact Airius

MOTOR

- Single phase, electrically commutated, 92% efficient motor. Single or two speed, factory programmable.
- · Sealed bearings, no lubrication required

OPERATING TEMPERATURES

• Operating Temp = -30° C (-22°F) to 50° C (122°F) • Thermal shut off = 110° C (230°F)

• Reset = 90°C (195°F)

HOUSING

- PC/ABS Resin Inc. internal fixed blade stator
- 5VA flame resistance rating
- 1.8m (6') steel safety leash cable (fastened to housing)

NOISE LEVEL

• Floor Level = $0 - 32 \, dB(A)$

INGRESS PROTECTION

• IP54 Rated

COLOUR

 
- Cool gray 2C Off white as standard
- Can be tailor painted to your colour specifications

WARRANTY

- 5 years parts and workmanship from shipping date
- 120 day money back guarantee (T's & C's apply)

NOZZLE COVERAGE PATTERN





Airius Europe Ltd

Holwell Farm, Cranborne, Dorset BH21 5QP

www.airius.co.uk

+44 (0)1202 554200



Get In Touch

Call: 0845 6880112

Email: info@adremit.co.uk







Airius Model R20/EC Aisle Product Information Sheet



R20/EC-A-230V

Page 2 of 2


PLACEMENT

PREPARATION

- Install electrical circuit(s) and outlet(s) in accordance with national and local electric codes
- Outlets should generally be mounted vertically unless a "twist/locking" type is being used
- Wall switch may be installed in circuit to disable power and prevent electrical hazards when servicing
- Confirm electrical continuity of Airius unit on the ground before permanently mounting in the ceiling

INSTALLATION

- Hang vertically as high in the ceiling as possible Typically 300mm (12") - 450mm (18") from the roof deck to intake
- The Airius unit performs best when air column from the nozzle is unimpeded to the floor
- Use professionally installed hardware, capable of supporting a minimum of five times the weight
- Hardware to hang the unit includes but is not restricted to: Hooks, chains, cables, carabiners, bridle rings, beam clamps and bolts
- Density of the placement is directly related to the effectiveness, performance and savings
- Mount out of reach from people and animals
- Floor plans, mezzanines, office locations, machinery, people placement, plumbing, lighting, duct work, electrical systems, natural light/air systems, cranes, doors, windows, ventilation and fire suppression systems are all factors in properly locating the Airius system within the ceiling

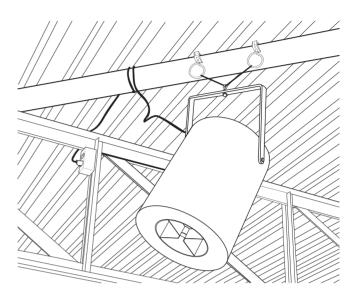

OPERATION

- Designed to operate 24 hours-a-day, 7 days-aweek to maintain thermal equalization/humidity equalization
- Use optional speed control to fine tune RPM if needed

MAINTENANCE

- Frequency of cleaning will vary by application and environment
- You may clean the plastic housing with a damp warm cloth, using mild household detergents
- Do not use petroleum products, thinners or solvents to clean any part of the Airius unit
- If the Airius unit fails, contact manufacturer











Airius LLC, © 2011. All Rights Reserved.

Airius Europe Ltd

Holwell Farm, Cranborne, Dorset BH21 5QP

www.airius.co.uk

+44 (0)1202 554200



Get In Touch

Call: 0845 6880112

Email: info@adremit.co.uk

Our Address