



Elztrip EZ200

Double panel radiant heater for department stores, industrial premises etc.

EZ200 is intended for total and supplementary heating as well as protection against cold draughts from windows in environments such as, department stores, assembly halls, industrial premises etc.


EZ200 is a double panel radiant heater with clean and simple design that blends well with electrical fittings.

- Integrated elements and a surface structure for improved efficiency.
- The heaters are approved for serial connection.
- To comply with Ecodesign Regulation (EU) 2015/1188 the unit must be installed with thermostat TAP16R (accessory).
 TAP16R has adaptive start, week program and open window detection.
- Standard mountings for installation included.
- Corrosion proof easing of hot zinc-plated and powder lacquered steel panels. Colour: RAL 9016, NCS S 0500-N. Heating panel of naturally anodised aluminium.


Elztrip EZ200 (IP44)

Туре	Heat output	Voltage	Amperage	Max. element temperature	Dimensions LxHxW	Weight
	[W]	[V]	[A]	[°C]	[mm]	[kg]
EZ208	800	230V~	3,5	320	683x64x282	4,9
EZ212	1200	230V~	5,2	320	923x64x282	6,8
EZ217	1700	230V~	7,4	320	1221x64x282	8,8
EZ222	2200	230V~	9,6	320	1520x64x282	10,7
EZ20831	800	400V2~	2,0	320	683x64x282	4,9
EZ21231	1200	400V2~	3,0	320	923x64x282	6,8
EZ21731	1700	400V2~	4,3	320	1221x64x282	8,8
EZ22231	2200	400V2~	5,5	320	1520x64x282	10,7

Installation height

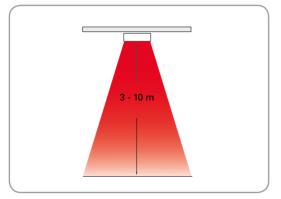

Minimum distances

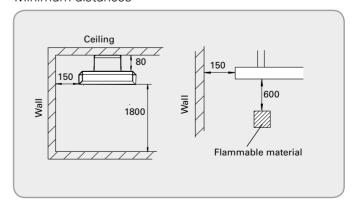

Design and specifications are subject to change without notice.

26



Get In Touch

6


Call: <u>0845 6880112</u>


abla

Email: info@adremit.co.uk



Dimensions

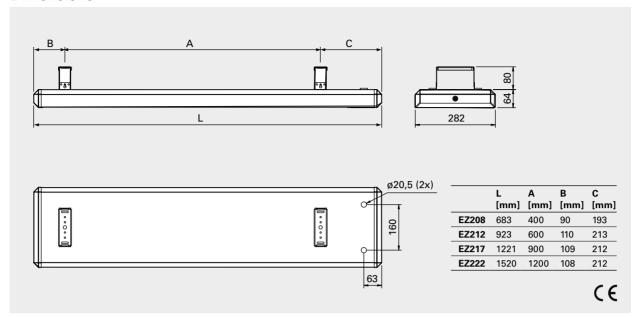

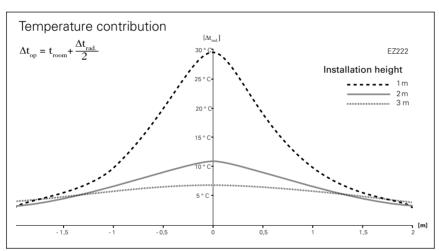



Elztrip is an elegant and effective solution to cold draught problems Hilton in Malmö has adopted this solution in their large glass lobby.



EZ200 is a perfect solution for heating working stations.

27



Get In Touch

Call: 0845 688011

Email: info@adremit.co.uk



Elztrip EZ200

Positioning, mounting and connection

Positioning

To estimate approximately how many radiant heaters are needed to cover an area the formula is:

Min. number of heaters = Area of the premises [m²] Installation heigth [m] × Installation heigth [m]

This formula is a basic estimation of the minimum number of radiant heaters needed to maintain the comfort. To calculate the right output for each heater, the total heating requirement must be calculated, see the Technical handbook.


When planning an Elztrip installation, the distance between the heaters should not be greater than the height between heater and floor, that means (a) should be less than (H). See Fig. In rooms not often used, the comfort demands are usually lower and the distance between the heaters can be increased. In rooms frequently used, the distance between a sedentary person and heater should be at least between 1.5 to 2 metres (Δh). When these two guide lines are followed, the difference in operative temperature will not exceed the comfort level Δt_{op} = 5 °C. This means that the difference between the real temperature and the temperature that we sense, will not be more than 5 °C.

Mounting


Elztrip is installed horizontally on ceilings, in armature rails, on cables, suspended, etc. Standard mountings for installation included. If the heater is suspended by wires, use the four mounting points on the heater. Standard fittings for mounting are included. When mounting on wire, suitable clips that prevent the panel from sliding should be acquired.

Connection

Elztrip is intended for permanent installation. The heaters are approved for serial connection.

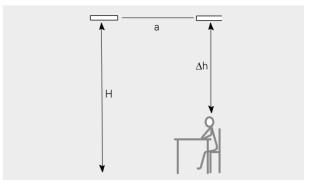

Recommended distances for Elztrip

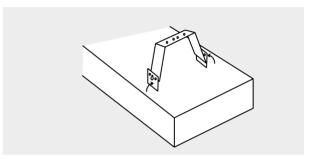

Standard fitting



Heating with EZ200 is hygienic since it does not cause any air movements.



EZ200 gives instant heat and no preheating is necessary which makes it ideal for buildings that are used on an irregular basis.



Get In Touch

Call: 0845 6880112

Email: info@adremit.co.uk



Control options

The heater must be supplemented with one of the following control options. TAP16R has adaptive start, week program and open window detection. Protection class IP44 is obtained by adding a protective enclosure TEP44 and an external temperature sensor RTX54 which replaces the internal sensor. Please note that a relaybox RB3 is required for $400V{\sim}$ products.

Control by thermostat

- TAP16R, electronic thermostat
- RB3, relaybox 400V3N~ (EZ200 400V~)

Control by thermostat and black bulb sensor


- TAP16R, electronic thermostat
- SKG30, black bulb sensor
- RB3, relaybox 400V3N~ (EZ200 400V~)

Control by thermostat and presence detector

- TAP16R, electronic thermostat
- PDK65, presence detector with power supply
- RB3, relaybox 400V3N~ (EZ200 400V~)

The product can be controlled in a different way, e.g. by an overall control system (BMS) as long as the requirements of Ecodesign Regulation are met.

Controls and accessories

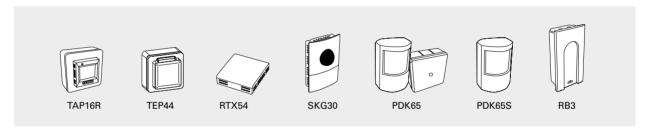

Туре	Description	HxWxD [mm]
TAP16R	Electronic thermostat, 16A, IP21	87x87x53
TEP44	Protective enclosure for TAP16R, IP44. Must be supplemented with RTX54.	87x87x55
RTX54	External room temperature sensor. Replaces internal senor. NTC10K Ω , IP54	82x88x25
SKG30	Black bulb sensor, NTC10K Ω , IP30	115x85x40
PDK65	Presence detector with power supply (up to 5 detectors), 230V~, max 2,3 kW, IP42/IP65	102x70x50
		88x88x39
PDK65S	Additional presence detector to PDK65, IP42	102x70x50
RB3	Relaybox 400V3N~ (400V3~/V2~, 230V3~/V2~), 16A, IP44	155x87x43

Controls for installations not covered by the Ecodesign Regulation (EU) 2015/1188

When the heater is used for technical heating purposes, and not as a local space heater, the following controls can be used.

Туре	Description	HxWxD [mm]
KRT1900	Capillary tube thermostat, IP55	165x57x60
KRTV19	Capillary tube thermostat with knob, IP44	165x57x60







Get In Touch

Our Address