

DDH3500



www.ecor-pro.com

Get In Touch

 Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

THANK YOU

Thank you for choosing this innovative DDH3500 dehumidifier.

This instruction manual describes the many benefits and advanced features that this unique product has to offer.

This dehumidifier is a tough, industrial unit designed to be used almost anywhere that dry air is required.

Desiccant/Absorption dehumidifiers are especially suited to applications where low relative humidities are needed and work well over a wide temperature range.

We specialise in complete indoor humidity control.

Our world class products incorporate the latest technological developments and are designed to create a quality environment.

It is important that you read these instructions carefully before installing and using your new dehumidifier.

Please keep them in a safe place for future reference.

SAFETY



For safety reasons, read this information carefully before operating. Persons who are not familiar with this type of product must not use it.

This appliance must be earthed and should only be connected to an earthed 120 V / 60 Hz mains supply. The installation must be in accordance with the regulations of the country where the unit is used.

The unit is designated for indoor operation.

- The dehumidifier is safe, however, as with other electrical appliance, use it with care.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Get In Touch

 Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

- Children should be supervised to ensure that they do not play with the appliance.
- Do not clean the dehumidifier by spraying it or immersing it in water.
- Do not insert any object into the opening of the dehumidifier.
- Disconnect from the mains before cleaning the unit or any of its components.
- Never connect to an electrical outlet using an extension cord. If an outlet is not available, one should be installed by a licensed electrician.
- Any service other than regular cleaning or filter replacement should be performed by an authorized service representative. Failure to do so could result in a loss of warranty. Your dehumidifier is supplied with an electrical cable and an earthed plug. Should it be necessary to replace this plug at any time, you must use an earthed electrical plug.


Warning! Never operate this appliance if it has a damaged cord or plug. If the supply cord is damaged, it must be replaced by an approved service representative or a similar qualified person in order to avoid any hazards.

There should be direct access to the electrical plug after connecting the power!

Do not use your dehumidifier under the following conditions:



If the power cable wires are frayed or cut

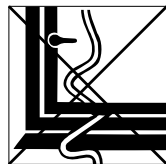

Where the power cable may be damaged




Where it may be damaged by chemicals



This product is not made for DIY repair



When small children may be left unattended

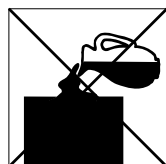

If there is a risk of liquid falling on the unit

Get In Touch


Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
 Settle, North Yorkshire, BD24 9RH

HOW IT WORKS

Your DDH3500 Desiccant dehumidifier removes moisture using a continuously rotating moisture absorbing wheel/rotor (This 'Desiccant Rotor' is literally a 'honeycomb' of extremely hygroscopic membranes). A highly efficient yet low noise fan draws air into the unit (Process Air) and forces it through a portion of the absorbent rotor. As the air passes through the rotor, the honeycomb, of hygroscopic membranes absorb almost all of the moisture creating an extremely dry airstream, this airstream is discharged directly through the 'Dry Air Outlet'. A second fan pushes a separate air stream (Regen Air) through a heater bank (Regen Heater) where it's temperature is raised. This air is then channelled back through a section of the rotor. As this air passes back through the membranes, its higher temperature drives-out the previously absorbed moisture and discharges it as warm wet air through the 'Wet Air Out' duct. As the wheel rotates, this process of collecting and discharging moisture is continuous.

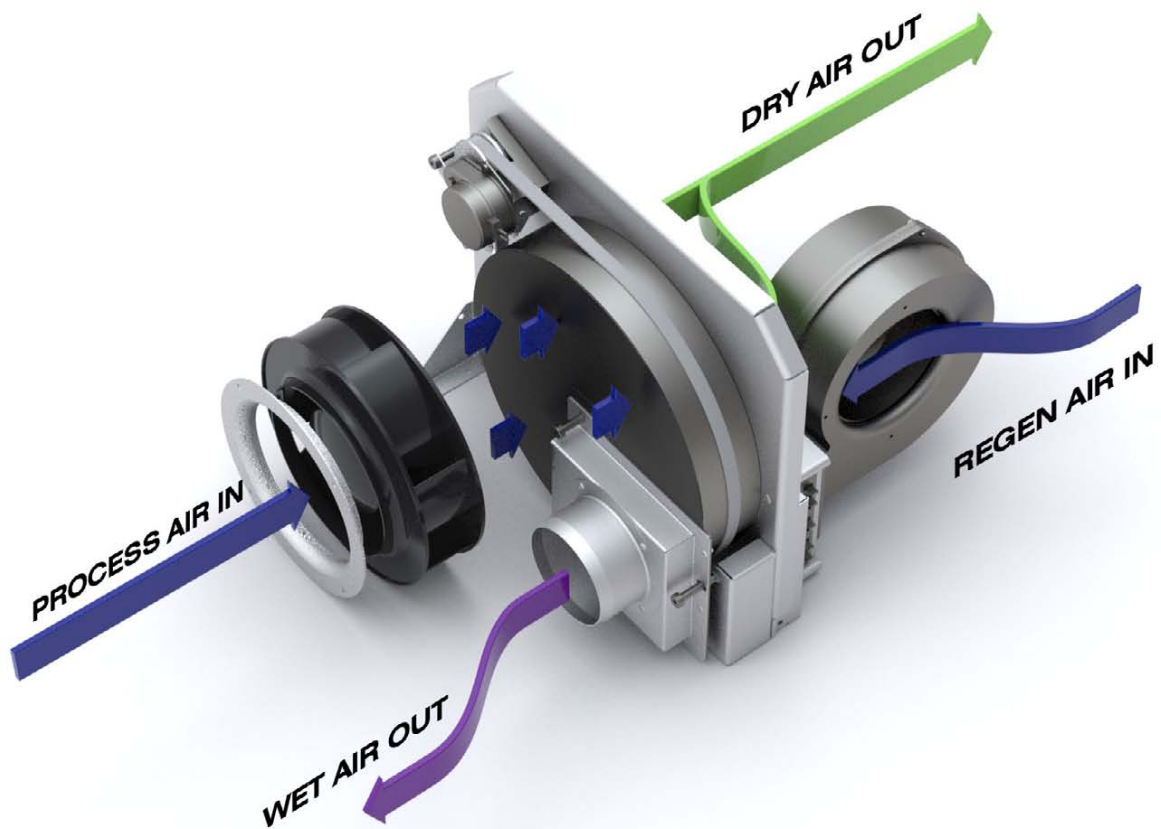

Get In Touch


Call: [0845 6880112](tel:08456880112)
Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

DESICCANT ROTOR

The Desiccant Rotor is the heart of the DDH3500 dehumidifier. It is an array of specially absorbent membranes arranged as a series of corrugations (as shown in the cut-away image below) to give a vast surface area making it an extremely efficient moisture collector. It is encased in a galvanized steel ring and turns on high quality sealed ball bearing units.

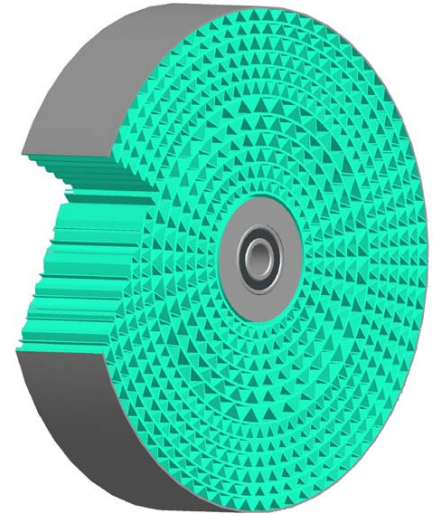

REGEN HEATER BANK



The DDH3500 uses a ceramic PTC type regen heater.

PTC (Positive Temperature Coefficient) heaters are based on a semi-conductor that changes resistance as it becomes hotter. The semi-conductor is designed so that its resistance rises rapidly at a pre-designated temperature, thus it maintains this temperature across a wide range of operational conditions.

This characteristic means that the heating element can never over-heat to hazardous temperatures, even if the regen airflow is completely blocked.



Get In Touch

 Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

POSITIONING

The DDH3500 is designed only for indoor use however, it can be placed inside or outside the room to be dried.

Internal Positioning:

When positioning the unit inside the room, place centrally, ensuring inlet and outlet ducts are clear of obstruction.

If required, ducts can be connected to the outlet and/or inlet to direct the drying to specific areas.

The Wet-Air-Out and Regen-Air-In **MUST** be ducted to and from outside the room.

External Positioning:

When positioning the unit outside the room, connect ducting to the outlet to direct the dry air stream into the room to be dried. The Process-Air-Inlet inlet should also be ducted to the room to give a re-circulation effect.

Note:

As the Wet-Air-Out discharge is warm and very humid ensure it is directed where it will have no adverse effect on the immediate environment.


All ducting lengths should be kept to a minimum - longer lengths will reduce performance.

The Wet-Air-Out is warm and humid, when a duct is attached, condensation may form on the inside of the duct. This duct should slope downwards away from the unit to prevent ant condensation running back into the unit.

CONTROLS

The controls are positioned on the front of the unit next to the air outlet duct, they are:

- Power Switch
- Ammeter
- Hour Meter
- Remote Humidistat Switch
- Remote Humidistat Connector

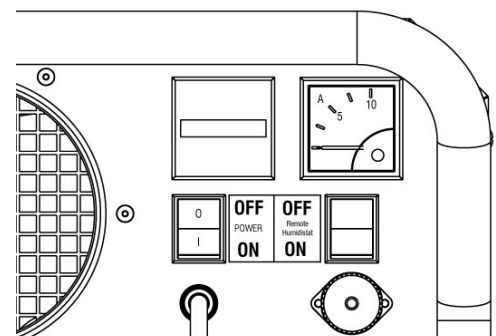

Get In Touch

Call: [0845 6880112](tel:08456880112)
Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

OPERATION

Stand-Alone Operation:

Connect unit to suitable mains supply

Ensure 'Remote Humidistat' switch is set to 'OFF' position

Switch 'Power' switch to 'ON' (I) position.

The fan will start and the Ammeter reading will rise. (The ammeter indicates the current taken by the PTC heater bank. Its reading will depend on the 'Process' air temperature and the 'Regen' airflow. Typically, it will indicate between 4 and 6 amps - this will reduce if the airflow is low or the Process air temperature is high.

Remote Operation:

For remote operation it is necessary to connect a switch or humidistat via the 'Remote Humidistat Connector' - this can be accessed by removing the dust cap. A connection plug is available on request.

ATTENTION - The remote connector is mains voltage!

The remote switch/humidistat should be connected between pins 1 and 3.

The Earth pin is connected to ground and can be used if required. (see wiring diagram)

The 'Remote Humidistat' switch should be set to the 'ON' position.

The unit will now operate according to the state of the remote switch.

Air Filter:

The DDH3500 has an inlet air filter, this should be checked periodically and if necessary cleaned. It can be cleaned with a vacuum cleaner or washed in mild detergent.

ATTENTION: Do not run the unit without a filter fitted as dust will impair the performance of the Desiccant Rotor.

Get In Touch



Call: [0845 6880112](tel:08456880112)




Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

TECHNICAL DATA

Specifications	DDH3500
Typical Extraction @ 27°C 60%rh	35 l /day
Air Flow (Process)	400m ³ /hr
Air Flow (Regen)	125 m ³ /hr
Voltage	120 V
Current @ 27°C/60%rh	12.5 A
Frequency	60 Hz
Power @ 27°C/60%rh	1.5kW
Phase	1ph
Dimensions (mm)	560 x 352 x 345
Weight (NET)	19.8kg
Weight (GROSS)	23kg
Operating Temperature	-20°C - +40°C

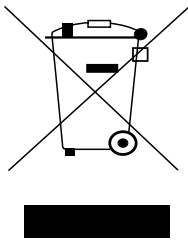

Disposal

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Get In Touch




Call: [0845 6880112](tel:08456880112)



Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

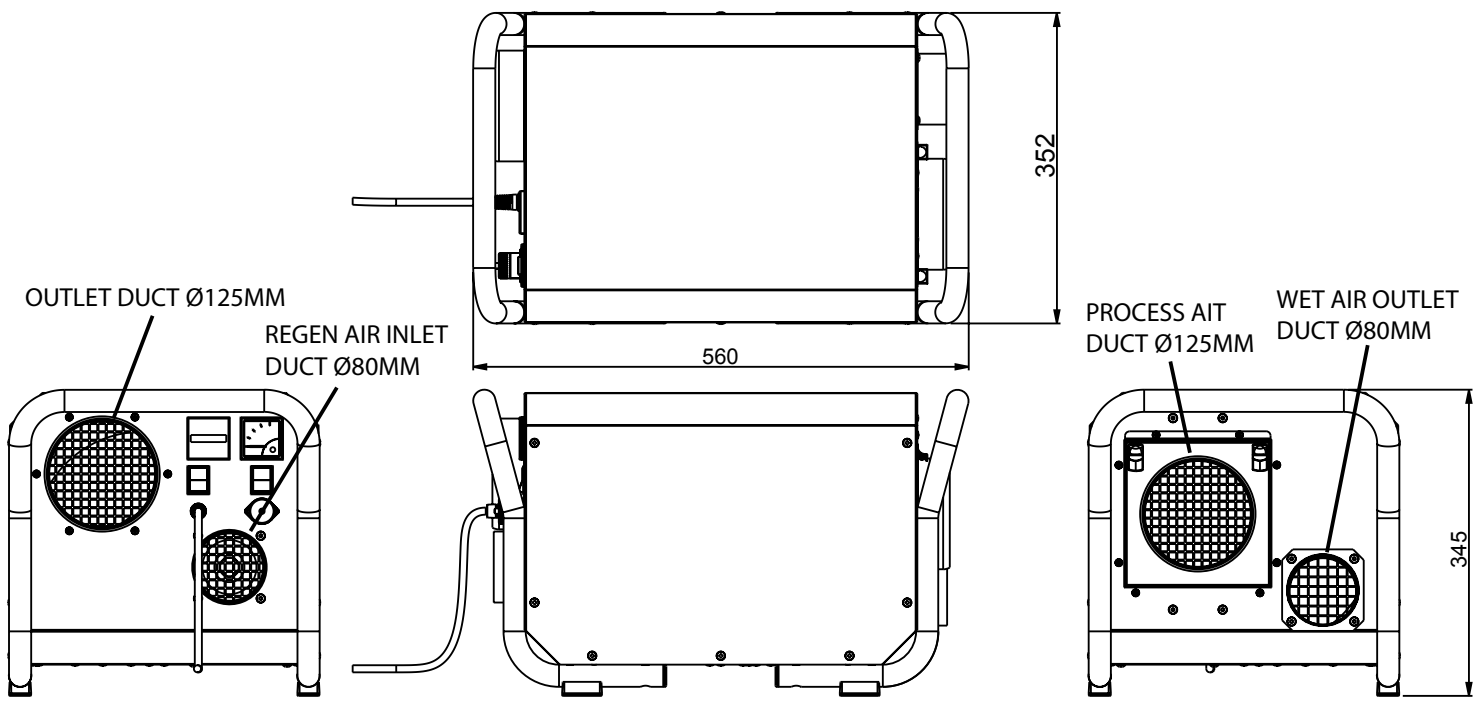

Get In Touch

Call: 0845 6880112
Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH



MAINTENANCE

ATTENTION:

- **Maintenance should only be carried out by qualified personnel**
- **Unit should be disconnected from mains before removing covers**
- **If unit has just been running, heater bank may still be hot**

Desiccant Rotor:

The desiccant rotor is maintenance free however, if it becomes blocked with dust (e.g. if it has been running without inlet air filter) it can be cleaned by vacuum cleaner or low pressure compressed air.


Heater Bank:

The PTC heater bank is maintenance free however, if it becomes blocked with dust (e.g. if it has been running without inlet air filter) it can be cleaned by vacuum cleaner or low pressure compressed air.

Over-Heat Protector:

In the event of total airflow loss, the over-heat protector will operate. If this happens it will need to be manually re-set after the airflow is restored.

To reset, push the red button (R) down.

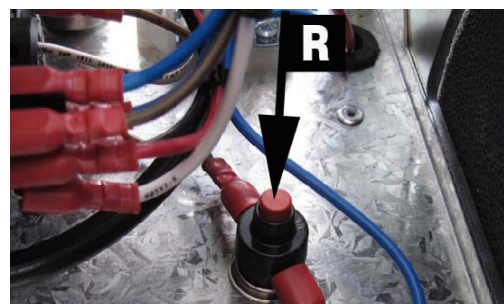

Desiccant Rotor Drive:

The desiccant rotor is driven by a geared motor via a toothed belt. The rotation speed is approximately 48RPH. It can be seen turning during operation through the air outlet duct,



Get In Touch

Call: [0845 6880112](tel:08456880112)
Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

TROUBLE SHOOTING

If the dehumidifier does not operate:

- Make sure the unit is plugged in.
- Check the fuse
- Check the remote humidistat setting
- Ensure the humidistat (if fitted) is turned on.

Low Airflow:

- Check inlet air filter
- Check inlet/outlets not obstructed
- Check ductwork (if fitted) is not obstructed
- Check voltage level
- Check fan is working

If the unit is noisy:

- Check fan operation
- Check rotor drive
- Check for loose screws

Low Dehumidifying Effect:

- Check airflows
- Check Amps reading
- Check rotor is turning



Low Amps Reading:

- Check Regen airflow
- Check Over-Heat Protector
- Check Heater bank

Rotor Not Turning

- Check belt tension
- Check drive-motor operation
- Check rotor alignment

Get In Touch

-  Call: [0845 6880112](tel:08456880112)
-  Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

SPARE PARTS

Description	Part No.
Inlet Air Filter	DH01-C024
Inlet Filter Grille	DH01-A008
Fan Motor	DH01-P010
Fan Motor Capacitor	DH01-P014
Regen Fan	DH06-P003
Regen Fan Capacitor	DH06-P006
Desiccant Rotor	DH01-P009
Rotor Drive Belt	DH01-P005
Rotor Drive Pulley	DH01-P007
Rotor Drive Motor/Gearbox	DH01-P006
Heater Bank	DH01-A010
Over-Heat Protector	DH01-P015
Mains Cable (UL)	WR-001-UL
Mains Cable Gland	DH01-P017
Mains Switch	DH01-P003
Remote Humidistat Switch	DH01-P003
Ammeter	DH01-P001
Hour Meter	DH01-P002
Remote Humidistat Connector	DH01-P013
Remote Humidistat Plug	DH01-P022


Get In Touch

 Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk


Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
 Settle, North Yorkshire, BD24 9RH

WIRING DIAGRAM

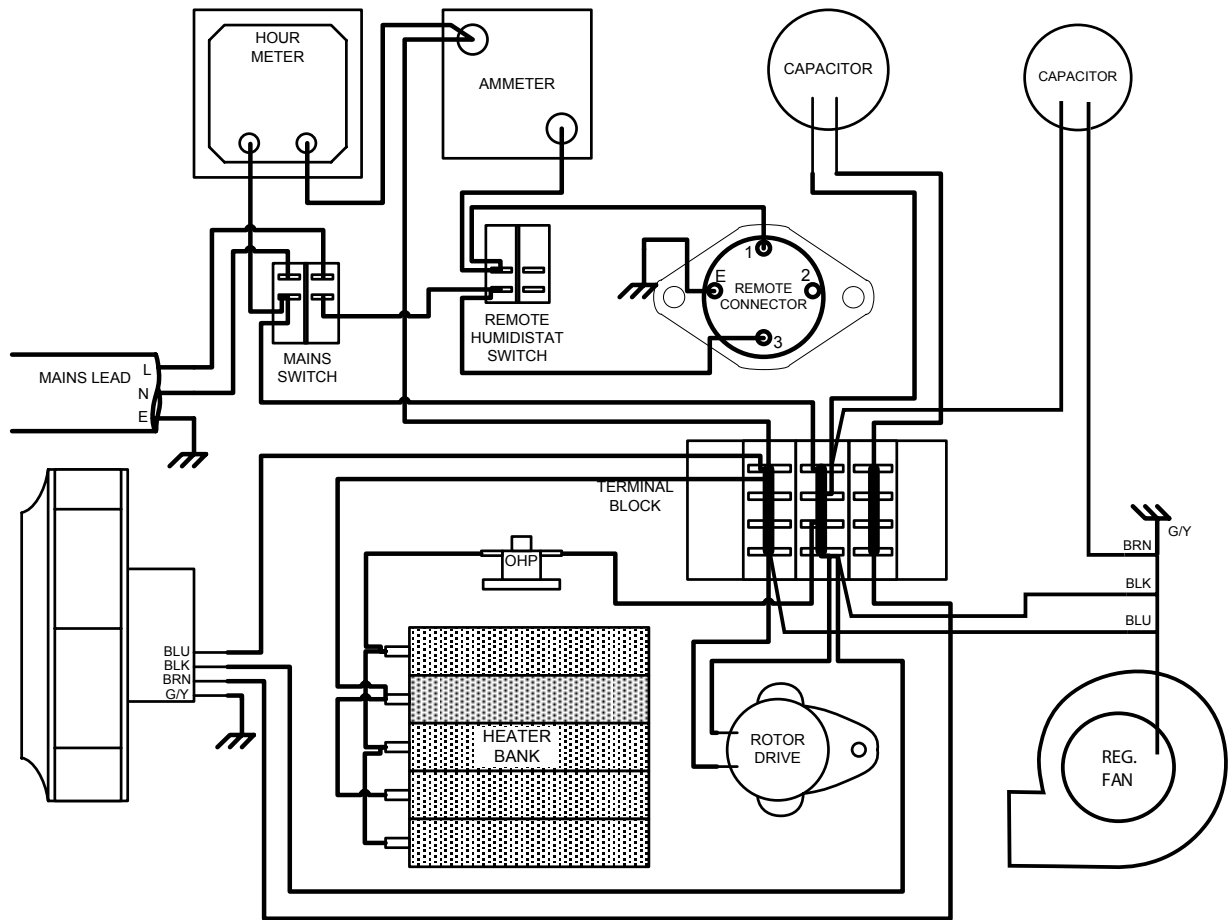

SCHEMATIC DIAGRAM

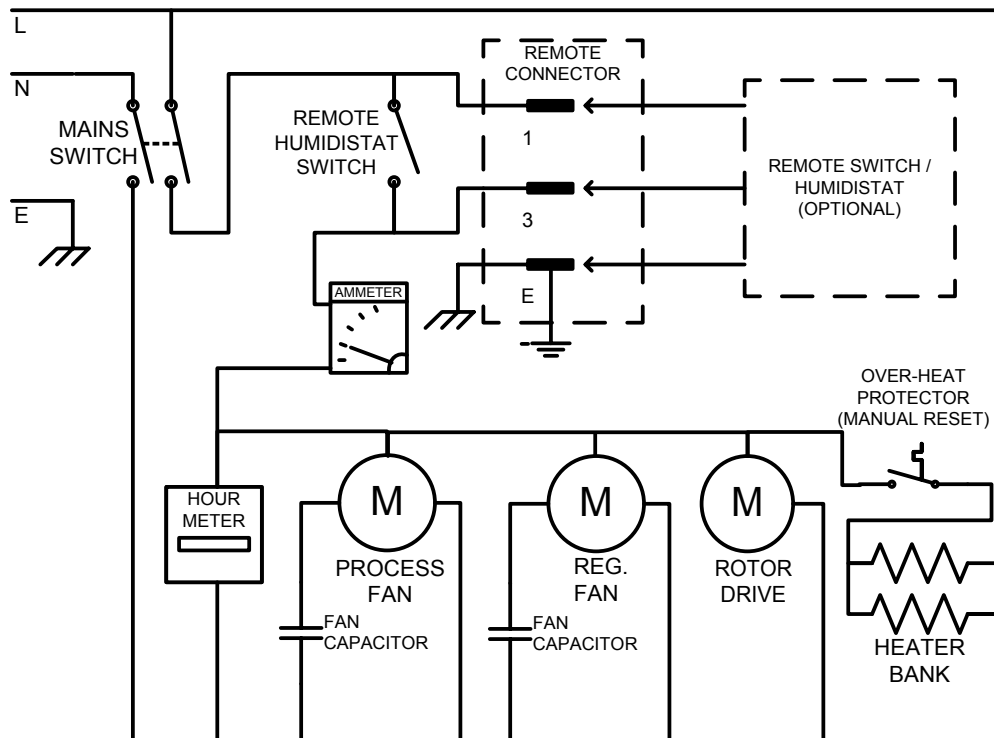

Get In Touch

Call: 0845 6880112
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
 Settle, North Yorkshire, BD24 9RH



Y

Get In Touch



Call: [0845 6880112](tel:08456880112)



Email: info@adremit.co.uk

Our Address



Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH





Y

Get In Touch

 **Call:** [0845 6880112](tel:08456880112)
 **Email:** info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH





Ecor Pro B.V.
Anton Philipsweg 9-11
1422 AL Uithoorn
The Netherlands
Tel. +31 297 560 213
Fax +31 297 560 187
info@ecor-group.com

‰*

Get In Touch



Call: [0845 6880112](tel:08456880112)



Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH