



EH1776

Double Duct Air Conditioner



INSTALLATION AND USER MANUAL

BEFORE INSTALLING AND USING THIS AIR CONDITIONER, PLEASE READ ALL INSTRUCTIONS CAREFULLY.

Get In Touch





















Call: [0845 6880112](tel:08456880112)



Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

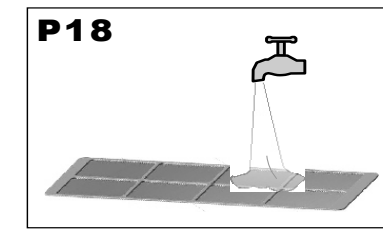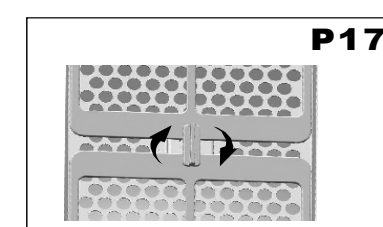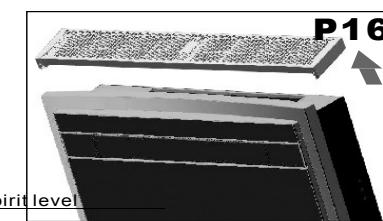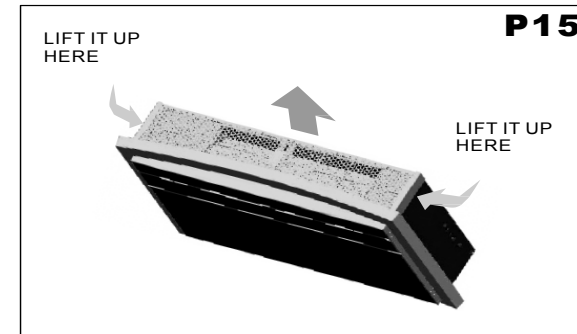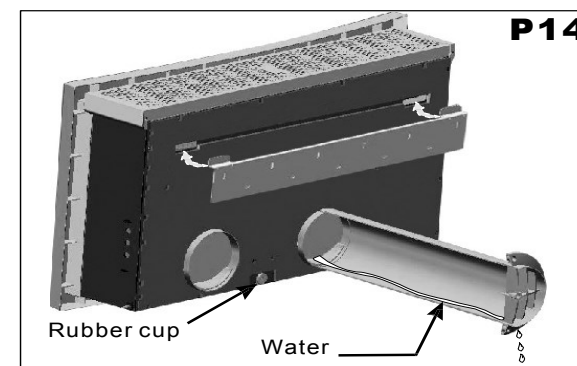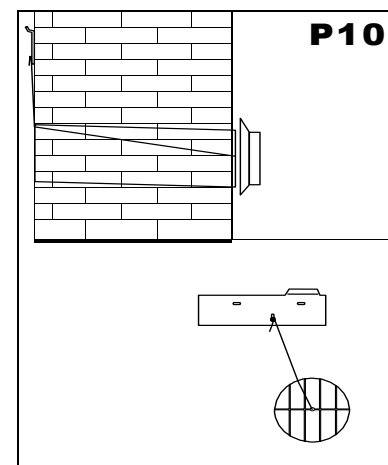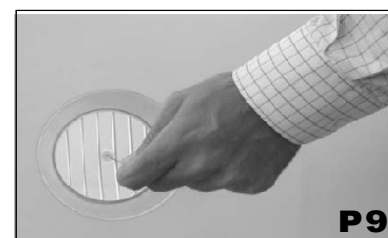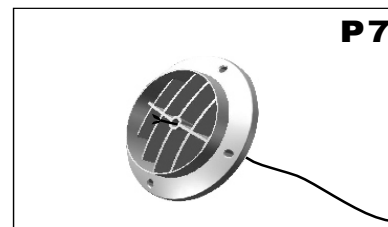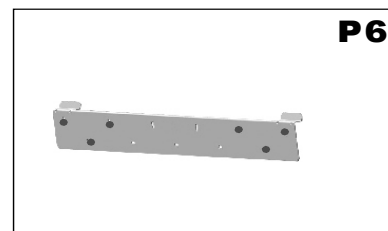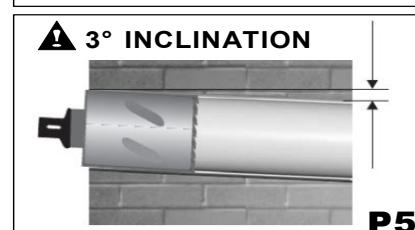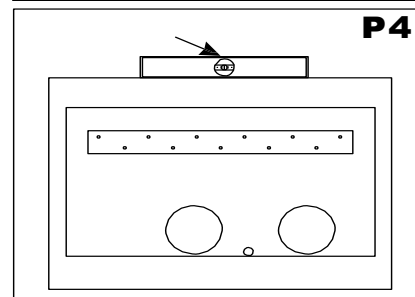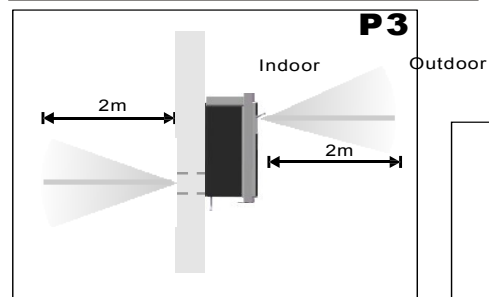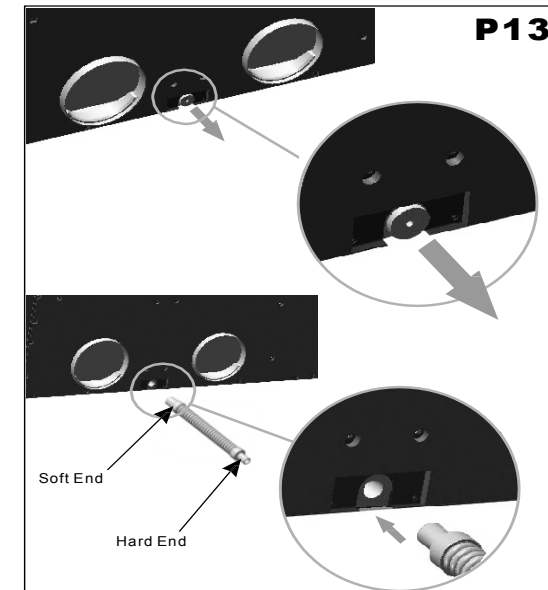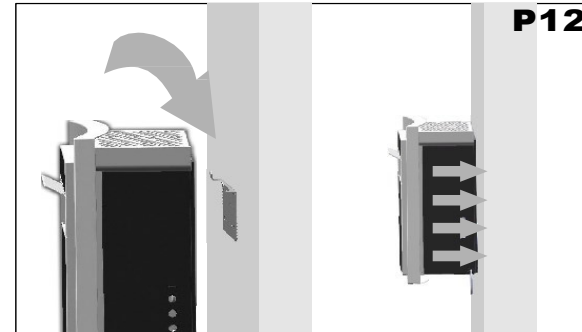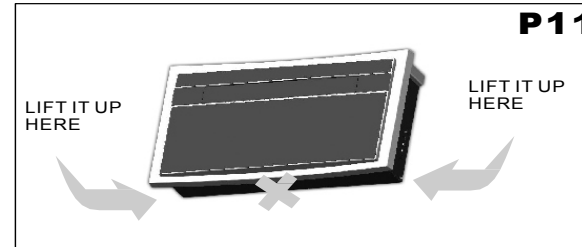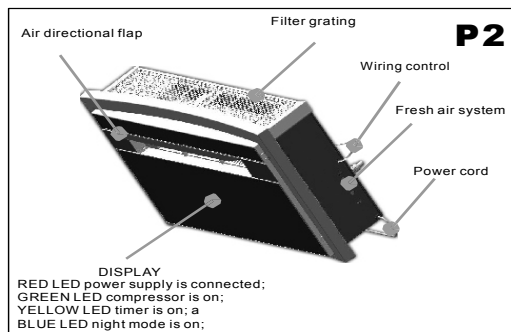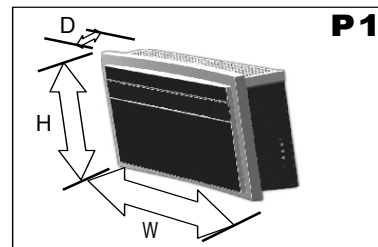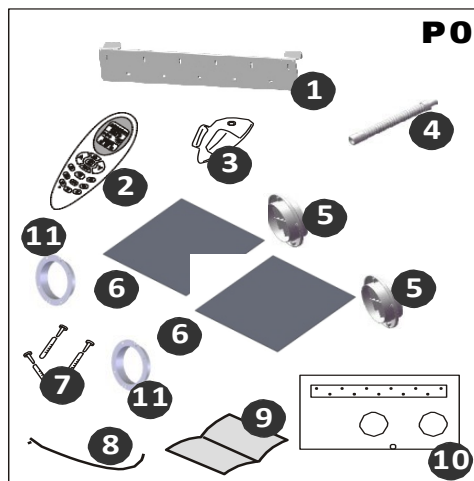

Get In Touch

Call: [0845 6880112](tel:08456880112)
Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH



1. GENERAL INFORMATION

1.1 INTRODUCTION.....1

1.2 IMPORTANT SAFETY INSTRUCTIONS1

1.3 RECIEVING THE GOODS2

1.4 HANDLING2

1.5 LIST OF ACCESSORIES.....2

1.6 TECHNICAL FEATURES2

2. INSTALLATION

2.1 POSITIONING THE AIR CONDITIONER.....3

2.2 PAPER TEMPLATE3

2.3 DRILLING THE WALL3

2.4 FASTENING THE BRACKET4

2.5 INSTALLATION OF THE PIPES4

2.6 FITTING THE GRATINGS.....4

2.7 FITTING THE AIR CONDITIONER ON THE BRACKET.....4

3. USE AND MAINTENANCE

3.1 DESCRIPTION OF LCD ICONS5

3.2 REMOTE CONTROL FUNCTIONS6

3.3 HEATING MODE7

3.4 COOLING MODE7

3.5 DRY MODE8

3.6 FAN MODE8

3.7 SLEEP MODE9

3.8 AUTO MODE.....9

3.9 TIMER OFF FUNCTION10

3.10 TIMER ON FUNCTION10

3.11 (Optional) Wired Wall Pad Controller11

3.12 FRESH AIR SYSTEM.....12

3.13 INSTALLING AND CHANGING THE BATTERY12

3.14 MAINTENANCE.....13

3.15 TROUBLESHOOTING13



Get In Touch

Call: 0845 6880112

Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

1.1 INTRODUCTION

Please note: Do not dispose of any packaging until the installation of the air conditioner is completed.

After having removed the packing, check that all the content is intact and complete. (See list of accessories). In the event of missing parts, contact your retailer.

This air conditioner has been designed to cool or heat the air of a room and should only be used for this purpose.

The manufacture cannot be held liable for damage caused to property or injury to persons or animals due to incorrect installation, regulation and maintenance or improper use.

This air conditioner contains R410a refrigerant, at the end of its life, the disposal of this air conditioner must be in accordance with the strict regulation governing the recycling of this product, please use caution during the disposal. Please contact your local authority for regulatory advice.

Don't switch on before having totally assembled the air conditioner and before installing in its correct operating position.

Before starting the appliance, check that it is correctly earthed, according to the legislation in force in the country concerned.

1.2 IMPORTANT SAFETY INSTRUCTIONS



When using this electrical appliance, basic safety precautions should always be followed:

Do not place objects on, or allow objects to obstruct the air inlet or outlet openings. Extreme care should be taken when any product is used by, or near children and pets, and whenever the product is left operating and unattended.

Please note:

Before operating the product, remove the air conditioner from its packaging and check if it is in good condition.

Do not let children play with the packaging or the plastic bags.

Do not operate any product with a damaged cord or plug, or after the air conditioner malfunctions, has been dropped, or damaged in any manner.

Return the air conditioner to an authorised service center for examination and repair to avoid any hazard.

Do not attempt to repair or adjust any electrical or mechanical functions on this air conditioner as this may void the warranty, always contact your local service engineer.

Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate. This air conditioner is not intended for use in wet or damp locations.

Do not place the air conditioner near an open flame, cooking or heating appliance or hot surface.

Do not let the power cord hang over the edge of a table or counter. Arrange the power cord away from an area where it may cause a trip hazard. Never place the power cord under a carpet or rug. Do not operate the air conditioner in areas where petrol, paint, or other flammable liquid are used or stored.

Do not carry out any cleaning or maintenance or access internal parts until the air conditioner has been disconnected from the mains electricity supply.

Do not alter the safety or regulating devices. Do not pull, remove or twist the electric cable connected to the air conditioner, even if disconnected from the mains electricity supply avoid prolonged direct contact with the flow of the air from the air conditioner and the room being closed with no ventilation for a prolonged period.

Repair or maintenance work must be carried out by a service engineer or by qualified technicians in compliance with the instructions given in this booklet. Do not alter the appliance, any modifications could cause damage or injury and the manufacture of the appliance will not be liable for any damage or injury caused by unauthorized modification.

This instruction booklet is an integral part of the appliance and should therefore be carefully preserved and always accompany the appliance in the event of transfer to another owner or user or another installation engineer. Should the booklet be damaged or lost, please request an additional manual or download from the prem-i-air website at www.prem-i-air.com

Get In Touch



Call: [0845 6880112](tel:08456880112)



Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH



1.3 RECEIVING THE GOODS

The air conditioner is delivered in a protective packaging and is accompanied by an instruction manual. This manual is an integral part of the air conditioner and should therefore be carefully read and preserved. When the air conditioner is unpacked, please check that the air conditioner and accessory pack are complete and undamaged.

1.4 HANDLING

Be fully aware of the weight of the air conditioner before attempting to lift it. Take all necessary precautions to avoid damaging the product or causing personal injury. It is advisable to remove the packaging only when the air conditioner has been located in the point of installation. Carefully remove the adhesive strips positioned on the air conditioner. Packaging components must be tidied up correctly and not left within reach of children as this could be dangerous.

1.5 LIST OF ACCESSORIES (P0)

- 1. FASTENING BRACKET
- 2. REMOTE CONTROL
- 3. REMOTE CONTROL HOLDER
- 4. DRAINAGE PIPE
- 5. EXTERNAL GRATING
- 6. PLASTIC SHEET AIR PIPE
- 7. KIT OF SCREWS
- 8. GRATING FIXING CORD
- 9. INSTRUCTION MANUAL
- 10. PAPER TEMPLATE FOR WALL DRILLING
- 11. 160mm RING
- 12. 150mm RING

This product has been manufactured to comply with 2006/95/EC and with amendments 92/31/EEC and 93/68/EEC



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Any batteries used in the remote control contain materials, which are hazardous to the environment. They must be removed from the remote control when they reach the end of their life and disposed of responsibly.

1.6 TECHNICAL FEATURES (P1,P2)

Description	Value
Cooling capacity*W(BTU/h)	2632(9000)
Heating capacity*W(BTU/h)	2730(9500)
Rated voltage(V)	230
Absorbed power in cooling*(W)	981
Absorbed current in cooling*(A)	4.3
Absorbed power in heating*(W)	880
Absorbed current in heating*(A)	3.9
Air flow(m³/h)	400
Noise level(dB A)	47
Dehumidification capacity*(L/24h)	16.3
Temperature Control	18-30°C
Fuse (T3.15L)	250V
Refrigerant	R410A
Global warmer potential(GWP)	2088
Tonnes of CO2 equivalent	1.34
Dimensions H/W/D(cm)	58/100/23.5
Net weight (KG)	45

* The above data could be changed in order to improve the performance

STANDARD TEST CONDITIONS - EN 14511-

OPERATING CONDITIONS IN COOLING AND DEHUMIDIFICATION MODE

- Inside 27°C DB; 19°C WB
- Outside 35°C DB; 24°C WB

OPERATING CONDITIONS IN HEATING MODE

- Outside 7°C DB; 6°C WB
- Inside 20°C DB

2.1 POSITIONING THE AIR CONDITIONER (P3)

To maintain the best performance from your air conditioner, prevent breakdowns or hazards, you must position it correctly. Please follow the guidelines and instructions below in full, as failure to do so could cause potential installation problems.

- The air conditioner must be installed on an exterior wall that has access to the outside with a minimum of 2 meters clearance to the outside.
- The air conditioner must be fitted leaving room all around as illustrated in the paper template.
- The wall on which the air conditioner is installed must be sturdy and able to withstand the weight of the air conditioner.

After determining the best place for installation as described above, please check to ensure that the wall can be drilled in the chosen area without interfering with other structures or installations (beams, lintels, girders, pipes, wires, etc).

Please also ensure that there are no obstacles on the outside of the wall, which may obstruct air circulation through the drilled holes, for example: (plants, and their leaves, slats or paneling, drain pipes, overflows and gratings, etc.). Any obstruction could interfere with the correct performance of the air conditioner.

2.2 PAPER TEMPLATE(P4)

Fasten the template to the wall once the following guidelines have been thoroughly checked.

- Do not drill any holes until you are completely confident that there are no obstacles in the area you wish to drill and there are no obstructions which could be hidden by the construction of the wall, for example: electrical wiring, water & gas pipes or supporting lintels or beams.
- Ensure that a spirit level is used, as the air conditioner must be level.
- Follow the installation instructions in full.

2.3 DRILLING THE WALL(P5)

Please note: If you are drilling the hole above ground floor level, please ensure that the area has been secured; while the holes are being drilled the outside area should be supervised, until drilling has been completed.

INLET AND OUTLET HOLES

- This operation should be carried out using the proper tools (diamond tip or core drills with high twisting torque and adjustable rotation speed).
- Fasten the template to the wall taking care to check the distance from the floor and or ceiling and keep it horizontal by using a spirit level.
- Use a pilot drill to mark the center of each core hole to be drilled.
- Use a core boring head having a diameter of 162 mm to drill the two holes for inlet and outlet airflow.



The holes must have a downward inclination of 3-5 degrees to prevent any back flow of water from the pipes.

DRAINAGE HOLE (P13)

This air conditioner has a dual system to drain the condensate moisture automatically. Before installing the Air Conditioner choose which is the most suitable system for your installation.

Please read carefully the follow instructions.

System "A": Drill a hole through the wall measuring 30mm in diameter in the position shown on the paper template. Drainage occurs by gravity. **For this reason, it is essential for the drain line to have a minimum downward inclination of at least 3 degrees throughout its length:** connect the drain pipe (from rubber terminal) to the air conditioner (back side) after unplugging the black rubber cup (see picture P13). With this solution, you can drain the condensate moisture to a suitable wastewater drain. Please pay particular attention to not draining the water where it may cause a nuisance.

System "B": If it is not possible to install the drainage pipe as described in system A. do not unplug the black rubber cup (picture P13). The condensate moisture will go outside via the hot air exhaust pipes (see picture P14).

Get In Touch



Call: 0845 6880112



Email: info@adremit.co.uk

Our Address



Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

2.4 FASTENING THE BRACKET(P6)

- Drill the holes for anchoring the fastening bracket to the wall using preferably the 6 holes shown in black on the paper template. If the wall is not sturdy enough it is advisable to use extra anchor bolts using the holes showed in grey on the paper template.
- The anchor bolts provided require an 8mm hole; the wall should be inspected to determine if the provided bolts are suitable or if it is necessary to use different anchor bolts. The manufacturer is not liable in the case of underestimation of the structural integrity of the anchorage made at the time of installation.

2.5 INSTALLATION OF THE PIPES

- After drilling the holes, the plastic sheet supplied with the air conditioner needs to be fitted through them.
 - Measure the depth of the wall and cut the supplied plastic sheet to size.
 - Roll the sheet and insert it into the hole (see below), paying attention to the joint line, which must be always in the upper position. Remember that the sheet must have the same inclination as the holes (min 3°).
- Insert the rings into the holes.

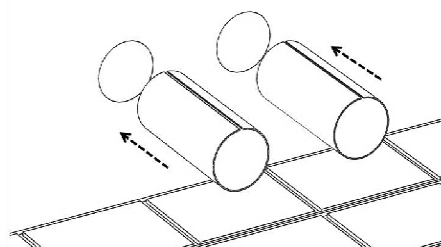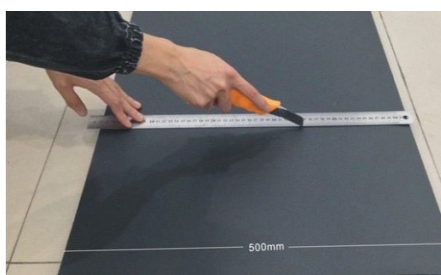


2.6 FITTING THE GRATINGS (P7,P8,P9,P10)

To fit the two external gratings please proceed as follows: familiarise yourself with the fitting of the grating to the tube, before installation. Insert the cords through the center of the grating. One grating fits on the outside of the tube and the other fits inside. The air discharge is the bigger hole and the grating therefore fits on the outside of the air discharge tube. Insert the supplied cord into the hole. Fold the outer grating in half grasping the cord with your free hand. Insert your arm inside the pipe with the grating and push all the way to the outside. Let the grating unfold and pull the cord toward you. With a little patience and manipulation, the 2 gratings will fit the end of the tubes. Grasping the cord, insert your fingers between the fins and pull the grating toward you until the grill is properly fitted into the pipe, keeping the fins in vertical position. If the external grating is accessible, and to prevent its accidental removal, it is recommended to fasten it to the wall with wall plugs and screws with a diameter of 6 mm. Tighten the cord and fasten it to the vent on the internal flanges.

2.7 FITTING THE AIR CONDITIONER ON BRACKET (P11,P12)

After checking again that the bracket is securely fastened to the wall, and that any necessary preparations for electric connection and condensate drainage (if it needs) have been made, fasten the air conditioner to its supporting bracket. Lift it up by holding the sides at the bottom. Tilt the air conditioner slightly toward the bracket. The air conditioner can now be pushed firmly against the wall. Inspect the installation carefully to make sure that the insulating back panel fits firmly against the wall and there are no gaps at the back of the air conditioner and that the two plastic semicircles on the rear of the air conditioner are placed inside of the two plastic hoses fixed inside the wall.

Get In Touch

 **Call:** 0845 6880112
 **Email:** info@adremitt.co.uk


Our Address

Puravent, Adremitt Limited, Unit 5a, Commercial Yard,
 Settle, North Yorkshire, BD24 9RH



3.1 DESCRIPTION OF LCD ICONS

Icons	Meaning	Icons	Meaning
	Auto		Fan speed
	Cooling		Airflow direction
	Dry		Timer off
	Fan		Timer on
	Heating		Sleep
	Clock		TEMP
	Not Used		

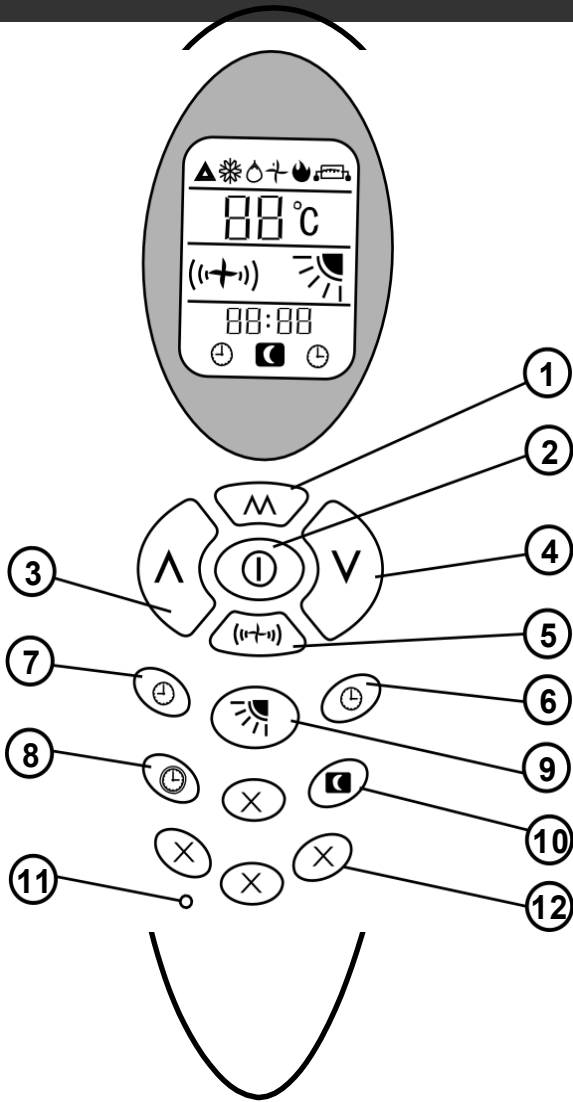


3.2 REMOTE CONTROL FUNCTIONS

- ① **MODE** BUTTON: Set up the air conditioner operating mode
- ② **ON/OFF** BUTTON: Turn on or turn off the air conditioner
- ③ **UP** BUTTON: Increase the temperature and time
- ④ **DOWN** BUTTON: Decrease the temperature and time
- ⑤ **FAN SPEED** BUTTON: Set up the fan speed
- ⑥ **TIMER ON** BUTTON: Set up the time the air conditioner starts
- ⑦ **TIMER OFF** BUTTON: Set up the time the air conditioner stops
- ⑧ **CLOCK** BUTTON: Adjust the clock
- ⑨ **LOUVRE SWING** BUTTON: Adjust the airflow direction
- ⑩ **SLEEP** BUTTON: Automatically adjusts the mode & temperature according to the circadian rule.
- ⑪ **RESET** BUTTON: Resets the unit.
- ⑫ **SPARE BUT TON**: Not Used




3.3 HEATING MODE

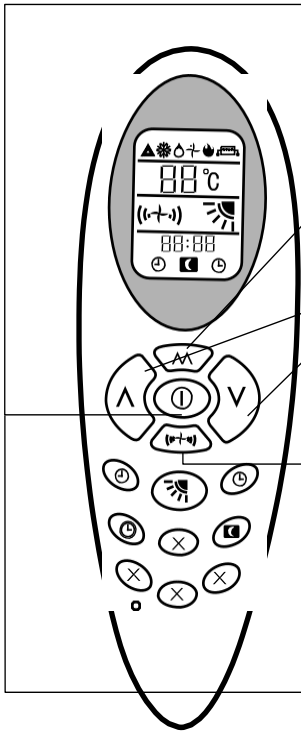

Sequence of operation

- 1** Press the **ON/OFF** button "①", switch on the air conditioner, it will run in memory mode.
- 2** Press the **MODE** button "^^", set up the mode to heat "☀", the air conditioner will run in heating.
- 3** Press **UP** "^" or **DOWN** "v" button, to adjust the temperature.
- 4** Press the **FAN SPEED** button "(+)", set up the fan speed, + is low speed, ++ is middle speed, +++ is high speed, (++) (flashing) is auto speed. For auto fan, the speed is chosen by the difference between the room temperature and the set temp.
- 5** Press the **ON/OFF** button "①", switch off the air conditioner. Next time this button is pressed, the air conditioner will operate in this mode by memory.


3.4 COOLING MODE

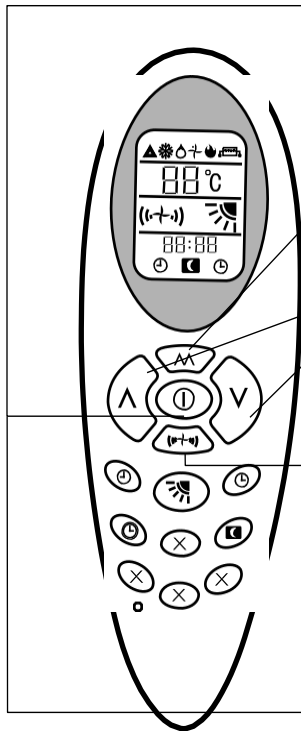

Sequence of operations

- 1** Press the **ON/OFF** button "①", switch on the air conditioner, it will run in memory mode.
- 2** Press the **MODE** button "^^", set up the mode to cool "❄", the air conditioner will run in cooling.
- 3** Press **UP** "^" or **DOWN** "v" button, to adjust the temperature.
- 4** Press the **FAN SPEED** button "(+)", set up the fan speed, + is low speed, ++ is middle speed, +++ is high speed, (++) (flashing) is auto speed. For auto fan, the speed is chosen by the difference between the room temperature and the set temp.
- 5** Press the **ON/OFF** button "①", switch off the air conditioner. Next time this button is pressed, the air conditioner will operate in this mode by memory.

3.5 DRY MODE

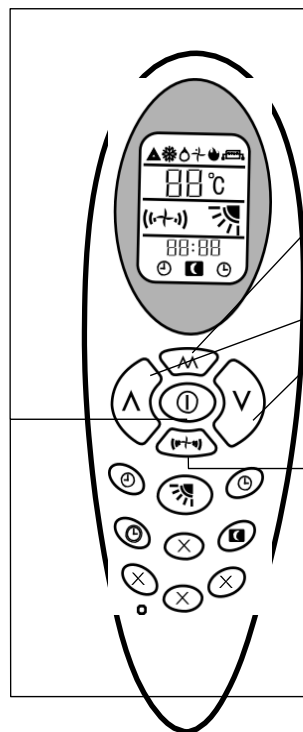

Sequence of operations

1

Press the **ON/OFF** button "①", switch on the air conditioner, it will run in memory mode.

2

Press the **MODE** button "M", set up the mode to dry "δ", the air conditioner will run in dehumidifying mode.

3

Press **UP** "Λ" or **DOWN** "V" button, to adjust the temperature.


4

FAN SPEED button is "⏏" disable, indoor fan speed is always low in dry mode.

5

Press the **ON/OFF** button "①", switch off the air conditioner. Next time when this button is pressed, the air conditioner will operate in this mode by memory.

3.6 FAN ONLY MODE

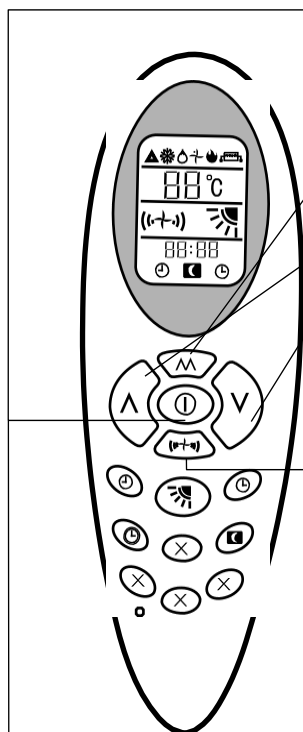

Sequence of operations

1

Press the **ON/OFF** button "①", switch on the air conditioner, it will run in memory mode.

2

Press the **MODE** button "M", to set the mode to fan "F", the unit will run in fan mode.

3

Press **UP** "Λ" or **DOWN** "V" button, to adjust the temperature

4

Press the **FAN SPEED** button "⏏", set up the fan speed, ⏏ is low speed, ⏏ is middle speed, ⏏ is high speed, ⏏ (flashing) is auto speed.


For auto fan, the speed is chosen by the difference of room temperature and setting temperature.
Room temperature-setting temperature > 5°C high speed.
Room temperature-setting temperature > 3°C middle speed.
Room temperature-setting temperature > 1°C low speed.

5

Press the **ON/OFF** button "①", switch off the air conditioner. Next time this button is pressed, the air conditioner operates in this mode by memory.



3.7 SLEEP MODE

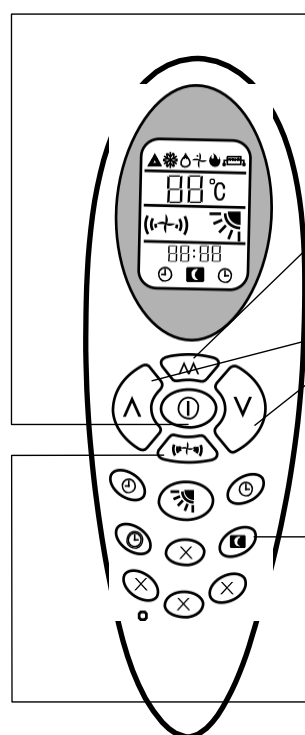

Sequence of operations

1

Press the **ON/OFF** button "①", switch on the air conditioner, it will run in memory mode.

2

Press the **MODE** button "^^", set up the mode to cool "❄" / heat "🔥" (heat pump) / auto "▲", the air conditioner will run this mode.

3

Press **UP** "Λ" or **DOWN** "V" button, to adjust the setting up temperature.


4

Press the **SLEEP** button "⏏", this icon will display on LCD, sleep function is set up; press it again, cancel the sleep function.

5

If the sleep function is launched, the fan speed is steady in low speed.

3.8 AUTO MODE

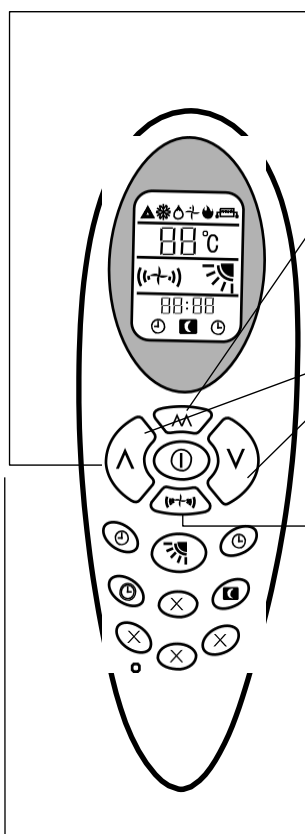

Sequence of operations

1

Press the **ON/OFF** button "①", switch on the air conditioner, it will run by memory mode.

2

Press the **MODE** button "^^", set up the mode to auto "▲", the air conditioner will run in auto mode. (Reference to "emergency operation")

3

According to the difference of room temperature and set temperature the unit will automatically choose the running mode (cool, heat, fan). The temperature set buttons UP "Λ" and DOWN "V" are disabled.

When room temperature $\leq 20^{\circ}\text{C}$, the unit will run in heat mode.

When temp $> 20^{\circ}\text{C}$ and $< 25^{\circ}\text{C}$, the unit will run in fan only mode.

When room temperature $\geq 25^{\circ}\text{C}$, the unit will run in cool mode.

4

Press the **FAN SPEED** button "⏏", set up the fan speed, 1 is low speed, 2 is middle speed, 3 is high speed, 4 (flashing) is auto speed.


For auto fan, the speed is chosen by the difference of room temperature and the setting temperature.

5

Press the **ON/OFF** button "①", switch off the air conditioner. Next time this button is pressed, the air conditioner operates in this mode by memory.




3.9 TIMER OFF FUNCTION

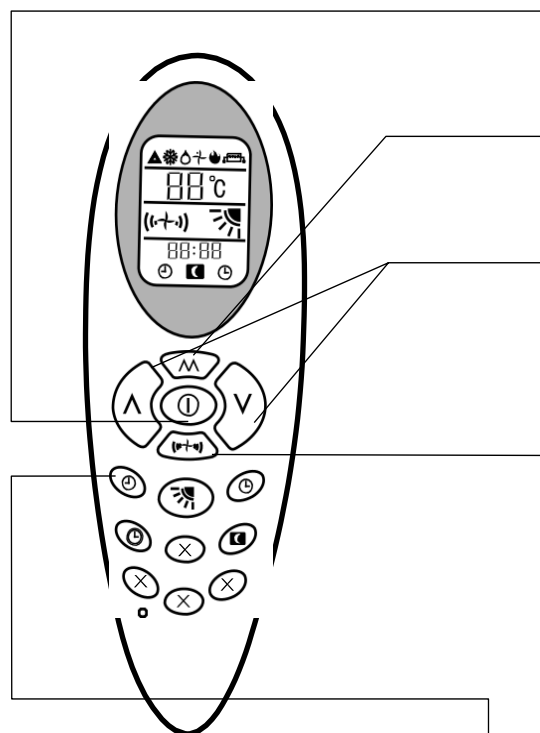

Sequence of operation

- 1** Press the **ON/OFF** button "①", switch on the air conditioner, it will run in memory mode.
- 2** Press the **MODE** button "M" set up the desired mode.
- 3** Press **UP** "Λ" or **DOWN** "V" button, to adjust the temperature.
- 4** Press the **FAN SPEED** button "(f+)", set up the fan speed, f+ is low speed, f+ is middle speed, (f+) is high speed, (f+) (flashing) is auto speed. For auto fan, the speed is chosen by the difference of room temperature and the setting temperature.
- 5** Press the **TIME OFF** button "⌚", set up the time the air conditioner switches off. Press the button "Λ" each time, adjusting up 1 hour; Press the button "V" each time, adjusting up 1 minute; When the time has elapsed, the air conditioner will switch off automatically. Pressing this button again before the air conditioner switches off will cancel the timer

3.10 TIMER ON FUNCTION

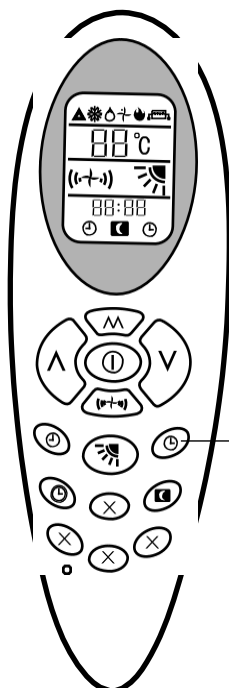


Sequence of operation

- 1** The air conditioner is switched off.
- 2** Press the **TIME ON** button "⌚", set up the time which the air conditioner turns on. Press the button "Λ" each time, adjusting up 1 hour; Press the button "V" each time, adjusting up 1 minute. Set up the operation **MODE**, **TEMPERATURE**, **FAN SPEED** etc., when the time has been reached, the air conditioner will start automatically. If the **TIMER ON** button is pressed again, the **TIMER ON** setting will be cancelled.



3.11 (Optional) Wired Wall Pad Controller

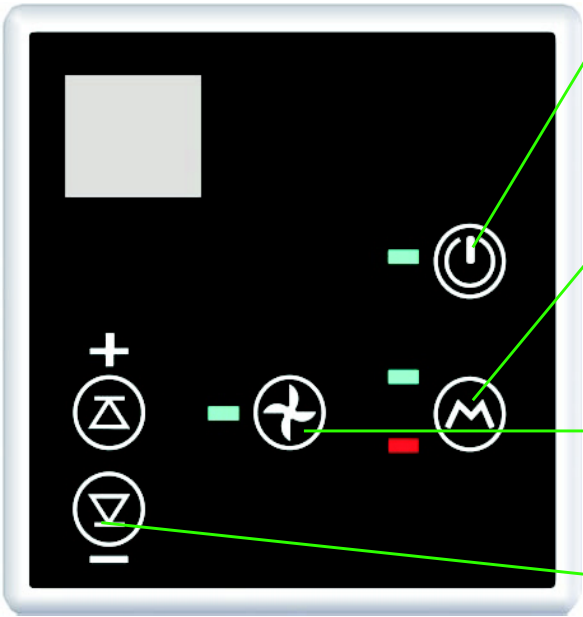


- 1 Press the ON/OFF button to switch the air conditioner ON or OFF, it will run in memory mode.
- 2 Press the MODE button to select cooling or heating mode.
- 3 Button is disabled.
- 4 Press the UP or DOWN button to select the desired temperature.

Wired Wall Pad Controller Installation

- Connect the wall pad wiring to the unit connector.
- Open the return air filter assembly and finger guard grille, you will see a wire with wall pad connector as shown in picture below:



3.13 FRESH AIR SYSTEM

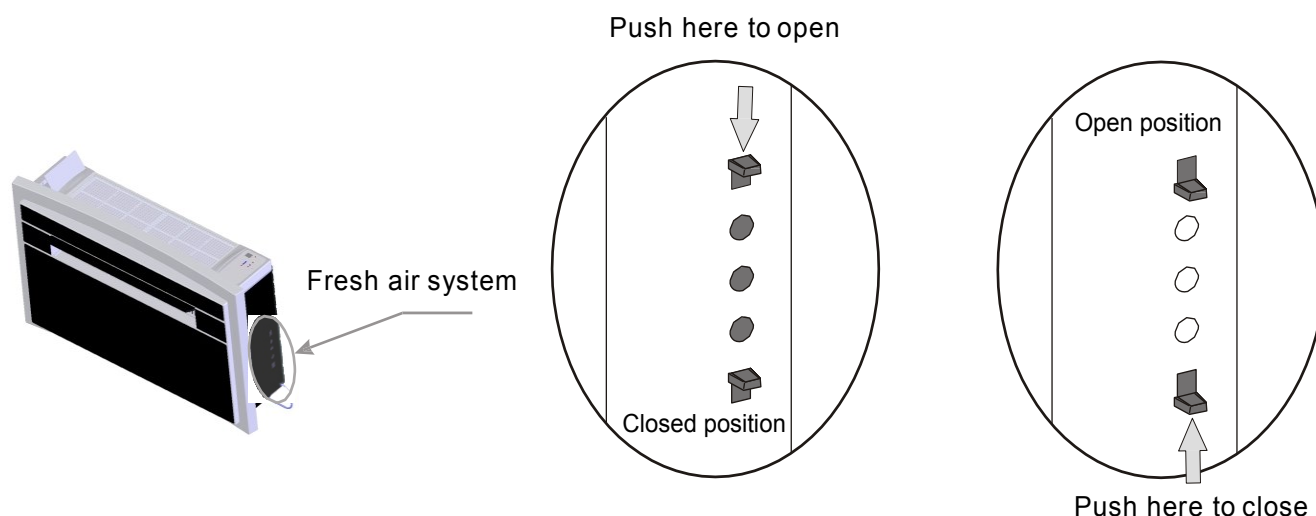

When the fresh air system is open the air conditioner will change the room air automatically: in this way new clean and fresh air will be pumped into the room.

You can open or close the fresh air system at any time.

If the air fresh system is closed the air conditioner performance is much higher so we suggest that the fresh air system should remain closed and open it for just a few minutes each day.


3.12 INSTALLING AND CHANGING THE BATTERY

--Open the battery cover, hold the hook and lightly pull up.

--Insert the battery (AAA, 2pcs), the positive terminal must align with the + mark on the plastic surface.

--Replace the battery cover.

Inspection: If you press the ON/OFF button "ⓘ" and no icons are displayed then please check the battery installation.

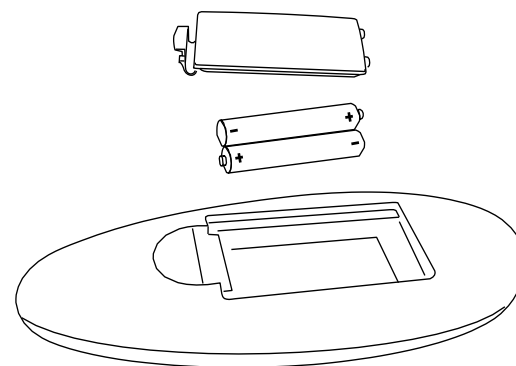

Get In Touch



Call: [0845 6880112](tel:08456880112)



Email: info@adremi.co.uk

Our Address

Puravent, Adremi Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

3.14 MAINTENANCE**(P15,P16,P17,P18)****FILTERS CLEANING:**

The filters should be regularly cleaned to keep the air conditioner running efficiently. Clean the filters every two weeks.

How to proceed:

1. Disconnect the air conditioner from the electrical supply.
2. Extract the filter grating (P15) in the same direction as the arrow.

Take out the filter as shown in P17.

Proceed to wash them (do not use hot water) and only when they are fully dried replace them in the same way.

ATTENTION: Do not use the air conditioner without filters as it could seriously damage the air conditioner.

EXTERNAL CLEANING:

- Disconnect the air conditioner from the electrical supply.
- Wipe external surfaces clean with a damp cloth only.
- Do not use an abrasive cloth or solvents, as this may damage the surfaces.
- Do not use excessively wet cloths or sponges, as water could damage the air conditioner and compromise safety.

**3.16 TROUBLESHOOTING
PROBLEMS & POSSIBLE
CAUSES / SOLUTIONS**

- The air conditioner does not work.
 1. Wrong settings of the timer –Please check.
 2. Problems on the power supply / Call the service center.
- The air conditioner does not cool the room.
 1. The room temperature is too high \Wait until the temperature goes down.
 2. The temperature is not properly set / Check it
 3. The grids could be obstructed / Check and remove the obstructions

POSSIBLE SOLUTIONS

- The air conditioner does not work for 3 min when switched on.
 1. Automatic protection of the conditioner.
Wait for 3 min and the air conditioner will start to work again.
- Strange smell in the room / Water drips from the air conditioner.
 1. Incorrect connection of the drainage pipe
 2. Damp in the room, coming from walls, carpets, furnishing or similar.
 3. Incorrect installation of the air conditioner
- The remote control does not work.
 1. Exhausted batteries.
 2. Wrong insertion of the batteries inside the remote control.



If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.


The max operating temperature for the air conditioner: (max cooling: outdoor DB43°C / WB26°C, indoor DB32°C / WB23°C; min heating: outdoor DB-5°C / WB-6°C, indoor DB20°C)

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.





<p>Smaltimento delle apparecchiature obsolete Disposal of your old appliance Entsorgung von Altgeräten Élimination des appareils obsolètes Como deshacerse de aparatos eléctricos y electrónicos viejos Eliminação do seu antigo aparelho</p>	
---	---



Smaltimento delle apparecchiature obsolete

1. Quando su n prodotto è riportato il simbolo di un bidone della spazzatura sbarrato da una croce significa che il prodotto è coperto dalla Direttiva Europea 2002/96/EC.
2. Tutti i prodotti elettrici ed elettronici dovrebbero essere smaltiti separatamente rispetto alla raccolta differenziata municipale, mediante impianti di raccolta specifici designati dal governo o dalle autorità locali.
3. Il corretto smaltimento delle apparecchiature obsolete contribuisce a prevenire possibili conseguenze negative sulla salute umana e sull'ambiente.
4. Per informazioni più dettagliate sullo smaltimento delle apparecchiature obsolete, contattare il comune, il servizio di smaltimento rifiuti o il negozio in cui è stati acquistati il prodotto.



Disposal of your old appliance

1. When this crossed-out bin symbol appears on a product it means that the product is covered by European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via specific collection facilities designated by the government or the local authorities.
3. Proper disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your municipality, the waste disposal service or the shop where you purchased the product.



Entsorgung von Altgeräten

1. Wenn dieses Symbol eines durchgestrichenen Abfalleimers auf einem Produkt angebracht ist, unterliegt dieses Produkt der europäischen Richtlinie 2002/96/EC.
2. Alle Elektro- und Elektronik-Altgeräte müssen getrennt vom Hausmüll über dafür staatlich vorgesehene Stellen entsorgt werden.
3. Eine ordnungsgemäße Entsorgung des Altgeräts trägt dazu bei, Schäden an der Umwelt und der menschlichen Gesundheit zu vermeiden.
4. Weitere Informationen zur Entsorgung des Altgeräts erhalten Sie bei der Stadtverwaltung, beim Entsorgungsamt oder in dem Geschäft, in dem Sie das Produkt erworben haben.



Élimination des appareils obsolètes

1. Quand figure sur un produit le symbole représentant une poubelle barrée d'une croix, cela indique que le produit est assujéti à la Directive européenne 2002/96/EC.
2. Tous les appareils et composants électriques et électroniques doivent être éliminés auprès de déchetteries spécifiques indiquées par les pouvoirs publics nationaux ou par les autorités locales.
3. La bonne élimination des appareils obsolètes contribue à prévenir les conséquences dommageables pour la santé des personnes et pour l'environnement.
4. Pour plus d'informations concernant l'élimination des appareils obsolètes, veuillez contacter votre mairie, le service d'élimination des ordures ou encore le magasin où le produit a été acheté.



Como deshacerse de aparatos eléctricos y electrónicos viejos

1. Si en un producto aparece el símbolo de un contenedor de basura tachado, significa que este se acoge a la Directiva 2002/96/EC.
2. Los aparatos eléctricos no se deben desechar junto con los residuos domésticos, sino a través de puntos de recogida designados por el gobierno o las autoridades locales.
3. La correcta recogida y tratamiento de los dispositivos inservibles contribuye a evitar riesgos potenciales para el medio ambiente y la salud pública.
4. Para obtener más información sobre cómo deshacerse de sus aparatos eléctricos y electrónicos viejos, póngase en contacto con su ayuntamiento, el servicio de recogida de basuras o el establecimiento donde adquirió el producto.





Eliminação do seu antigo aparelho

1. Quando este símbolo de caixote do lixo com uma cruz em cima estiver afixado a um produto, significa que o produto se encontra abrangido pela Directiva Europeia 2002/96/EC.
2. Todos os produtos eléctricos e electrónicos devem ser eliminados separadamente do lixo doméstico através de pontos de recolha designados para o efeito pelo governo ou pelas autoridades locais.
3. A eliminação correcta do seu aparelho antigo ajuda a evitar potenciais consequências negativas para o ambiente e para a saúde humana.
4. Para obter informações mais detalhadas acerca da eliminação do seu aparelho antigo, contacte as autoridades locais, um serviço de eliminação de resíduos ou a loja onde comprou o produto.



Get In Touch

-  **Call:** 0845 6880112
-  **Email:** info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard, Settle, North Yorkshire, BD24 9RH