

Original instructions **PF Smart App**



SE 5






Get In Touch

Call: <u>0845 6880112</u> **Email:** <u>info@adremit.co.uk</u>

Our Address

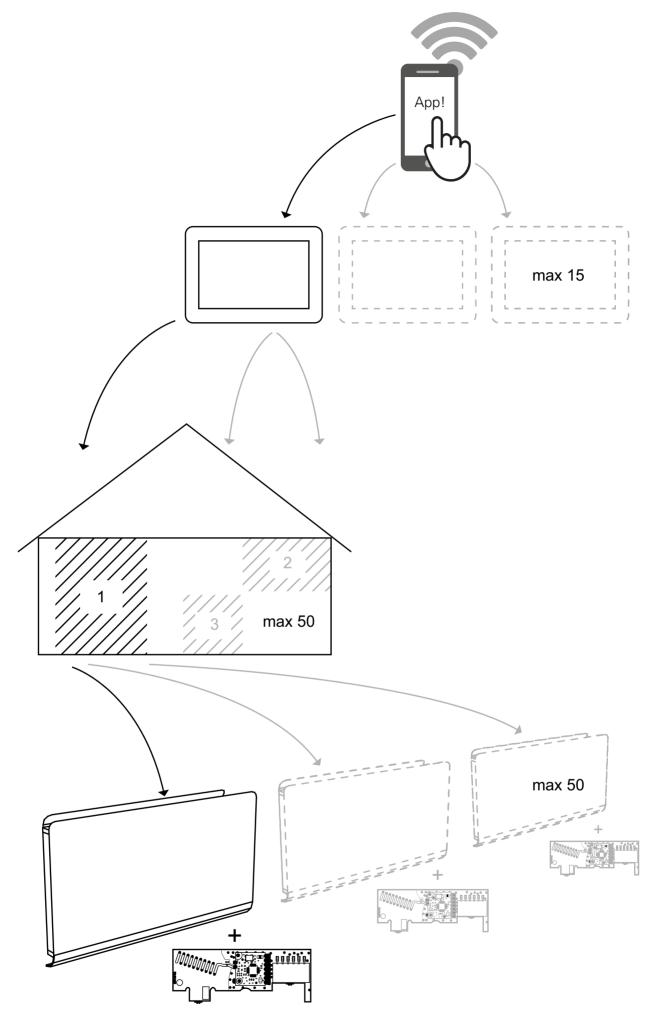

2




Get In Touch

Call: <u>0845 6880112</u>


Email: info@adremit.co.uk


Our Address

PFSRF

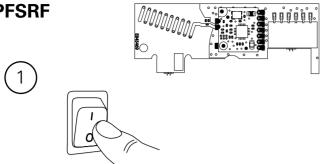



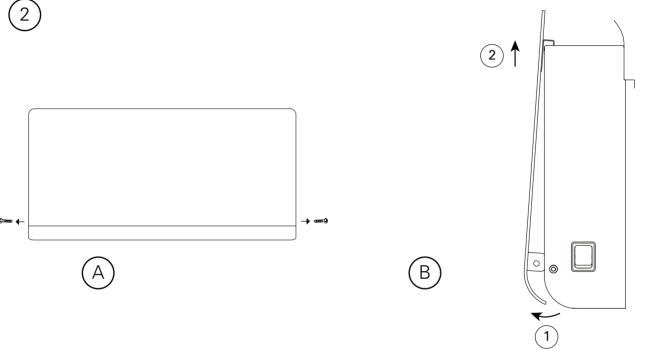

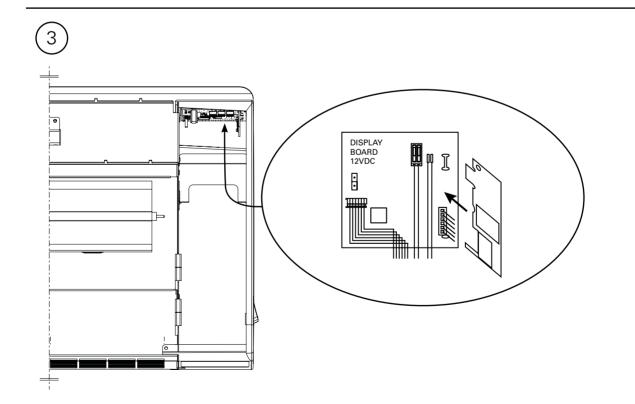




Get In Touch


Call: <u>0845 6880112</u>

Email: info@adremit.co.uk


PFSH

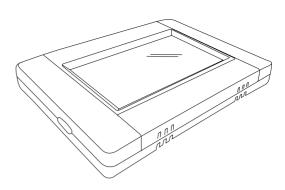

Väggmontage / Wall installation / Veggmontering / Wandmontage / Installation murale / Wandinstallatie Bordsmontage / Table installation / Bordmontering / Tischaufstellung / Installation sur table / Installatie op een tafel

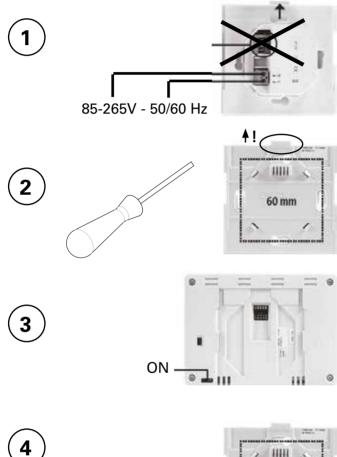

Mini-USB 5V, 1 A (ingår ej) / Mini USB 5V, 1 A (not included) / Mini USB 5V, 1 A (ikke inkludert) / Mini USB 5V, 1 A (nicht im Lieferumfang enthalten) / Mini USB 5V, 1 A (non inclus) / Mini USB 5V, 1 A (niet inbegrepen)

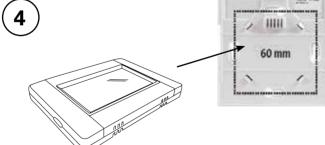

4



Get In Touch

Scall: 0845 6880112

Email: info@adremit.co.uk

Our Address





Content

PF Smart App


Section	Page
1: Connect hub PFSRH to WIFI	18
2: House creation	19
3: Pairing PFS and hub PFSRH	20
4: Pairing hub PFSH with App	22
5: Control with App	24
(0 + 1 + 1 + 1 + 1)	20

6: Control with hub PFSH 28

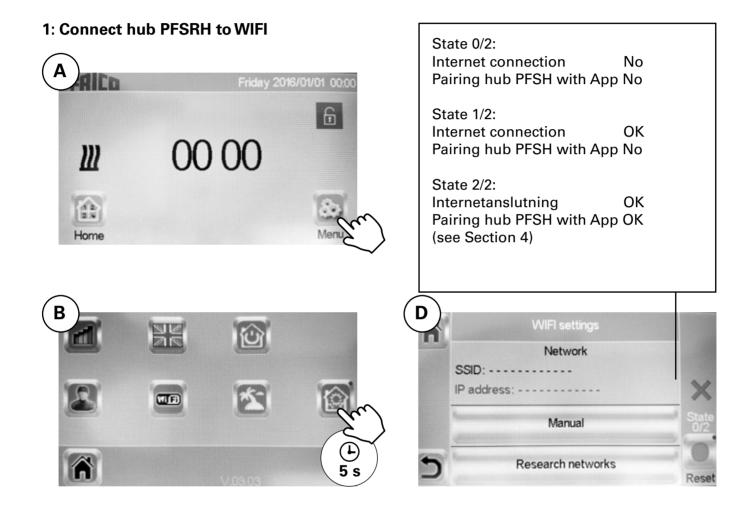

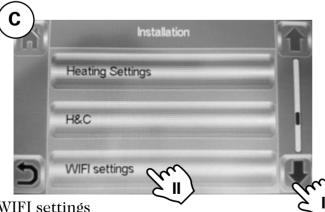

WIFI configuration can be set manually or scan the active networks. Automatic pairing time to WiFi router with WEP key: 3-4 min, with WPA2 key: 1 min.

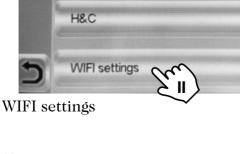

18




Get In Touch

Call: 0845 6880112

Email: info@adremit.co.uk



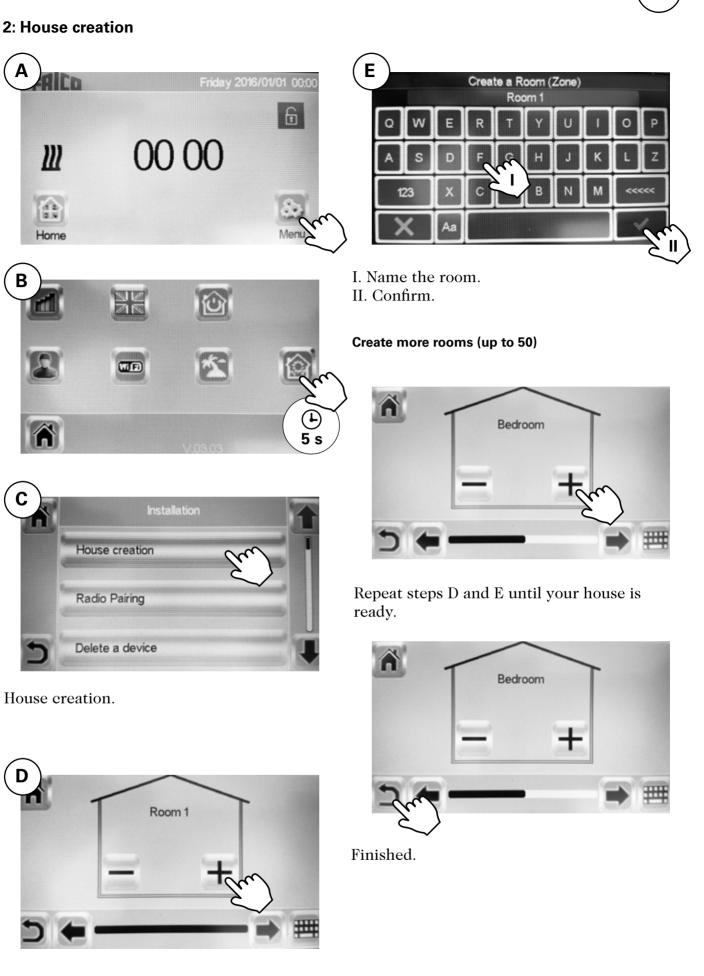



Get In Touch


Call: <u>0845 6880112</u>


Email: info@adremit.co.uk

Our Address



3: Pairing PFS and hub PFSRH

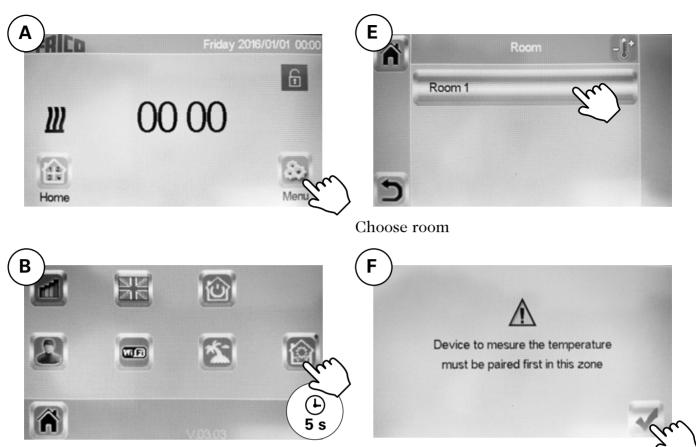

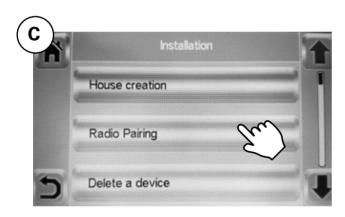

The fan convector to measure the temperature must be paired first in each room/zone.

See next page >>

Radio pairing.



Heating.

20



Get In Touch

🚱 Call: <u>0845 6880112</u>


Email: info@adremit.co.uk

Our Address







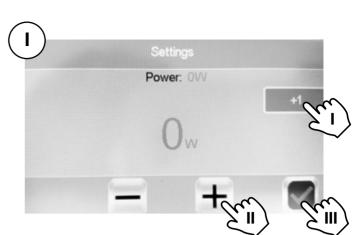


I. Select with how big steps you want to set the power +1/+10/+100/+10000.
II. Set the power that your PFS have, according to the type plate - 400/1000/1750W.
III. Confirm.



I. Name the fan convector. II. Confirm.

Each room / zone can have up to 50 fan convectors.

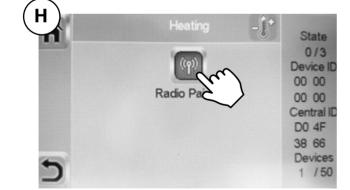



Get In Touch

Call: <u>0845 6880112</u>

Email: info@adremit.co.uk

Our Address



4: Pairing hub PFSH with App

FRICD	
Email	
Password	
STAY CONNECTED Allow automatic authentication during your next use of this application	
SIGN IN	
I forgot my password	
Drive a virtual house and enjoy home automations	

Download the app Frico PFS (Android, iOS) or visit the website fricopfsmart.frico.se -> Create an account.

В	eAll'd	
	LIST OF MY CENTRAL UN	NIT(S)
	Your first steps	12
	PAIR YOUR CENTRAL UNIT(S)	
	By using the button above, you may add a Central unit control it remotely	(s) and thus be able to
Add hub PFSH.		
C	-dib-	—
	FRICO	=
	LIST OF MY CENTRAL U	NIT(S)
PAIRING CODE	The s	teps of the procedure :
To pair a Central unit(s) with your smartphone, you must enter	a pairing code in your Central unit(s).	e application sends the pairing code to the email address of your user account.
CANCEL		ter the code received by e-mail in your Central unit(s).
ONICL		er a few tens of seconds, the new Central unit(s) should appear on your application.
	کر کے	
Send code to the emailaddree	ss added in the account	FRICD
		Hello,
		In order to control your Central unit(s) from a smartphone, please fill in this code :
		2000000
		This code is only valid until xx/xx/xxxx
See next page >>		This message has been sent automatically. Please do not reply.
		Frico

22




Call: <u>0845 6880112</u>


Get In Touch

Email: info@adremit.co.uk

Our Address



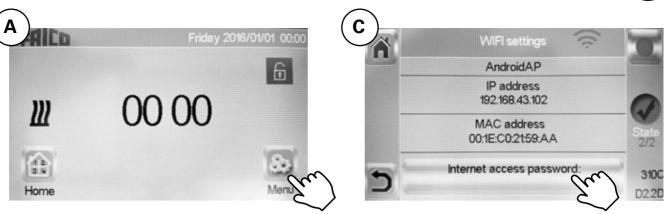

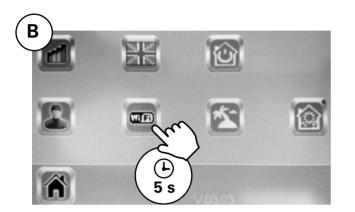



I. Enter pairing code. II. Confirm.

	WIFI settings	
	Network	
	SSID: Android AP	
	IP address:192.168.43.102	0
	Manual	State 2/2
5	Research networks	Reset

State 2/2 = OK!



Get In Touch

Call: <u>0845 6880112</u>

Email: info@adremit.co.uk

Our Address




5: Control with App

GB

Download the app Frico PFS (Android, iOS) or visit the website fricopfsmart.frico.se.




Home screen

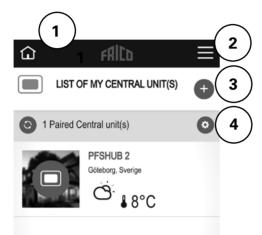

- 1. Home screen
- 2. Settings, see separate heating.
- 3. Add more units / hubs.
- 4. Hub settings: Personalize / Delete

Settings

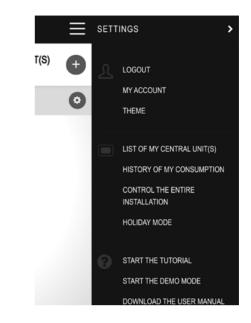

- Logout
- My account: ID, password, language, time format
- Theme: Appearance
- List of my central unit(s)
- History of my consumption
- Control the entire installation (Used to set all devices in the same mode.)
- Holiday mode: Set the departure time, return time and desired mode.
- Start the tutorial
- Start the demo mode
- Download the user manual
- Website of Frico
- Terms of use

24



Get In Touch

Call: <u>0845 6880112</u>

Email: info@adremit.co.uk

Our Address



Show room



ERICO LIST OF ROOMS PFSHUB 2 05:30

() Setpoint 20.0°C 23.3°C

0/0

Low



Change the settings for the room.

Fan mode Auto/Low/High/Off.





仚

ALL INSTALLATION

Settings that also can be done here:

- Control the entire installation (Used to set all devices in the same mode.)
- Holiday mode: Set the departure time, return time and desired mode.





Get In Touch

Call: <u>0845 6880112</u>


Email: info@adremit.co.uk

Our Address

Temperature mode

GB

It is possible to choose between three modes comfort, reduced mode (night mode) or frost protection. Settings for Comfort mode and Reduced mode are also applied in the week program when used.

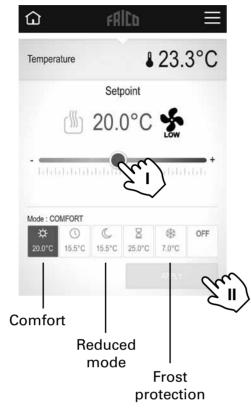

I Set desired temperature (Setpoint temperature). II Apply.

Default settings

Temperature mode	Setpoint	Fan mode
Comfort mode	21 °C	
Reduced (night mode)	15,5 °C	
Frost protection	7 °C	High (locked)

If OFF is selected frost protection is activated.

26




Get In Touch

🔓 Call: <u>0845 6880112</u>

Email: info@adremit.co.uk

Timer

The set temperature can be changed for a limited time with the timer (0 min to 44 days). The fan runs on the set value.

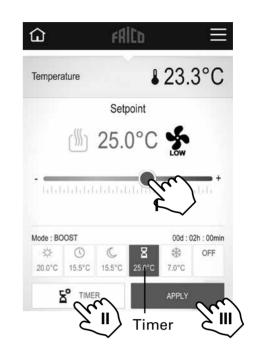


I Set temporary desired temperature (Setpoint temperature). II Set time. III Apply.

Our Address

Week program


Five preset week programs (Model 1-5) and the possibility to add one custom made for each room/zone.

The function ITCS (default) makes the control learn when it needs to start in order to reach a certain desired temperature at a specific time in the environment it is used. It can be disabled, on the hub or on PFS.

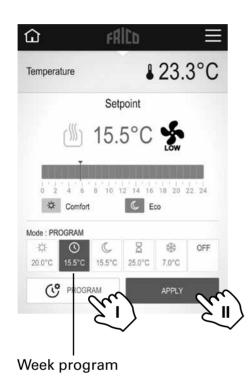

I Set week program, see separate heading. II Apply.

Set week program

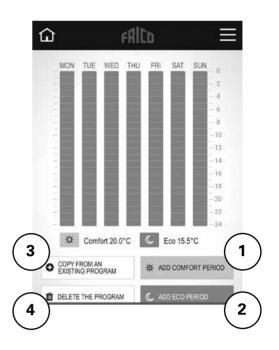

1 Add comfort period. 2 Add eco period (reduced mode). 3 Copy from an existing program: from a previously created or from a preset (model 1-5). 4 Delete the program



Get In Touch

Call: 0845 6880112 M


Email: info@adremit.co.uk



PF Smart App


6: Control with hub PFSH

Main screen

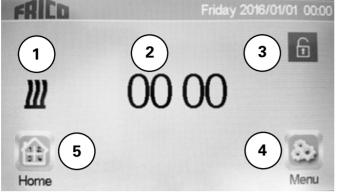

- 1. Red: Heat on, black: heat off
- 2. Display the time or the temperature of the choosen room. Make your choice by pressing on the central part of the screen.
- 3. Screen lock. A long press toggles between locking and unlocking.
- 4. Main menu
- 5. Show room. (Active even if the hub is locked, only viwing possible.)

Main menu

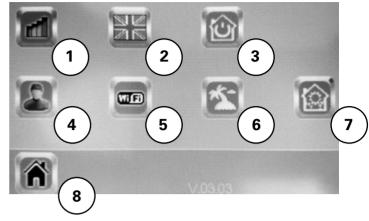

- 1. History of my consumption
- 2. Language (the flag of the current language is displayed).
- 3. Control the entire installation. Used to set all devices in the same mode.
- 4. User settings: Hour, Date, Summer-Winter (Manual/Auto), Temperature unit, Color (background), Buttons color, Backlight, Screen saver, Screen cleaner, Factory default user
- 5. WIFI settings
- 6. Holiday mode: Set the departure time, return time and desired mode.
- Installation menu (push and hold for 5 s): House creation, Radio pairing, Delete a device, Delete all devices, Identify a device, Anti freeze setpoint, Heating settings, H&C, WIFI settings, General factory default, Update Firmware, Parameters)
- 8. Main screen

General symbols



Return to previous menu.



Return to main screen.

28



Get In Touch


Call: <u>0845 6880112</u>

Email: info@adremit.co.uk

Our Address



Show room

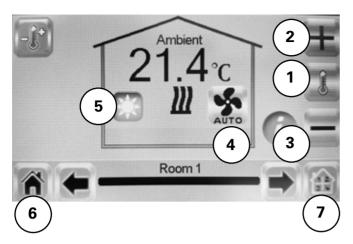

- 1. Show ambient temperature or desired temperature (setpoint temperature).
- 2. +/- Set the current setpoint (deactivated if the screen is locked).
- 3. General settings for the heating devices installed in the room. When the setting button (gear wheel) which can be fins here is held in (5 s), the following can be changed: Device Name, Power, ITCS (Yes / No)
- 4. Fan mode, see separate heading.
- 5. Modes, see separate headings -Temperature mode, Timer, Week program.
- 6. Main screen
- 7. Choose room.


Fan mode Auto/Low/High/Off.



Temperature mode

It is possible to choose between three modes comfort, reduced mode (night mode) or frost protection. Settings for Comfort mode and Reduced mode are also applied in the week program when used.



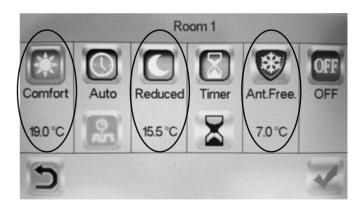

Default settings

Temperature mode	Setpoint	Fan mode
Comfort mode	21 °C	
Reduced (night mode)	15,5 °C	
Frost protection	7 °C	High (locked)

If OFF is selected frost protection is activated.



Get In Touch

Call: <u>0845 6880112</u>

Email: info@adremit.co.uk

Our Address

Timer

GB

The set temperature can be changed for a limited time with the timer (3 min to 44 days). The fan runs on the set value.



Week program

Five preset week programs (Program 1-5) and the possibility to add one custom made for each room/zone.

The function ITCS (default) makes the control learn when it needs to start in order to reach a certain desired temperature at a specific time in the environment it is used. It can be disabled, see section 6, heading Show room, 3.

Week programs are most easily done in the App.






Activate.



Change the set time.

Confirm.



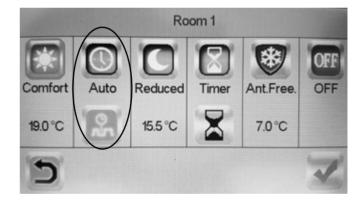

30



Get In Touch

Call: 0845 6880112

Email: info@adremit.co.uk





Get In Touch

& Call: <u>0845 6880112</u>

Email: info@adremit.co.uk

Our Address



Main office

Frico AB Box 102 SE-433 22 Partille Sweden Tel: +46 31 336 86 00

mailbox@frico.se www.frico.se

For latest updated information and information about your local contact: www.frico.se

 $\frac{\mathsf{E}\mathsf{H}\mathsf{E}}{\mathsf{C}}$



Get In Touch

Call: <u>0845 6880112</u> **Email:** <u>info@adremit.co.uk</u>

Our Address

uravent, Adremit Limited, Unit 5a, Commercial Yard, ettle, North Yorkshire, BD24 9RH

20170601, HH