

KVK Slim 200–500, KVK Slim 200–500 EC, KVK Silent 200–500, KVK Silent 200–500 EC

Operation and Maintenance Instructions

GB

Document in original language | 145899 · A007



Get In Touch

 Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH



© Copyright Systemair AB
All rights reserved
E&OE

Systemair AB reserves the rights to alter their products without notice.
This also applies to products already ordered, as long as it does not affect the previously agreed specifications.



145899 | A007

Get In Touch



Call: [0845 6880112](tel:08456880112)



Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH





Contents

1	Declaration of conformity.....	1
2	Warnings.....	2
3	Disposal and recycling.....	2
4	Product information.....	3
4.1	General.....	3
4.2	Technical data.....	4
4.2.1	Dimensions.....	4
4.2.2	Performance.....	6
4.2.3	Wiring diagram.....	8
4.3	Transportation and storage.....	9
5	Installation.....	9
5.1	Commissioning.....	10
6	Maintenance.....	10
6.1	Important.....	10
6.2	Cleaning the fan.....	10
7	Troubleshooting.....	11
8	Deinstallation/dismantling.....	11
9	Disposal.....	11

Get In Touch



 **Call:** [0845 6880112](tel:08456880112)
 **Email:** info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH



Get In Touch

 **Call:** [0845 6880112](tel:08456880112)
 **Email:** info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

1 Declaration of conformity

Manufacturer



Systemair Sverige AB
 Industrivägen 3
 SE-739 30 Skinnskatteberg SWEDEN
 Office: +46 222 440 00 Fax: +46 222 440 99
 www.systemair.com

hereby confirms that the following products:

KVK Slim 200–500, KVK Slim 200–500 EC, KVK Silent 200–500, KVK Silent 200–500 EC

(The declaration applies only to product in the condition it was delivered in and installed in the facility in accordance with the included installation instructions. The insurance does not cover components that are added or actions carried out subsequently on the product)

Comply with all applicable requirements in the following directives and regulations

Machinery Directive 2006/42/EC

Low Voltage Directive 2014/35/EU

EMC Directive 2014/30/EU

RoHS Directive 2011/65/EU
 (Residential units)

Ecodesign Directive 2009/125/EC

327/2011 Requirements for fans

1253/2014 Requirements for ventilation units

The following harmonized standards are applied in applicable parts:

EN ISO 12100	Safety of machinery – General principles for design – Risk assessment and risk reduction.
EN 13857	Safety of machinery – Safety distances to prevent hazard zones being reached by upper or lower limbs.
EN 60 335-1	Household and similar electrical appliances – Safety Part 1: General requirements.
EN 60 335-2-80	Household and similar electrical appliances – Safety – Part 2-80: Particular requirements for fans.
EN 62233	Measurement methods for electromagnetic fields of household appliances and similar apparatus with regard to human exposure.
EN 50 106	Safety of household and similar appliances – Particular rules for routine tests referring to appliances under the scope of EN 60 335-1 and EN 60967.
EN 60529	Degrees of protection provided by enclosures (IP Code).
EN 60 204-1	Safety of machinery – Electrical equipment of machines – Part 1: General requirements
EN 61000-6-2	Electromagnetic compatibility (EMC) – Part 6-2: Generic standards – Immunity for industrial environments.
EN 61000-6-3	Electromagnetic compatibility (EMC) – Part 6-3: Generic standards – Emission standards for residential, commercial and light-industrial environments.
EN ISO 5801	Fans – Performance testing using standardized airways
EN 13142	Ventilation for buildings – Components/products for residential ventilation – Required and optional performance characteristics.
EN 14121	Aluminium and aluminium alloys – Sheet, strip and plate for electrotechnical applications.

The complete technical documentation is available.

Skinnskatteberg, 2019-03-15

Mats Sándor
 Technical Director

145899 | A007

systemair

Get In Touch

Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
 Settle, North Yorkshire, BD24 9RH

2 Warnings

The following admonitions will be presented in the different sections of the document:



Danger

- Indicates a potentially or imminently hazardous situation which, if not avoided, could result in death or serious injury.



Warning

- Indicates a potentially hazardous situation that may result in minor or moderate injuries.




Caution

- Indicates a risk of damaging the product or prevent optimal operation.

Important

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

3 Disposal and recycling

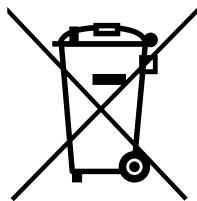

Residential products with this symbol at the nameplate are compliant to the WEEE directive. When disposing the unit, follow your local rules and regulations. This product packing materials are recyclable and can be reused. Do not dispose in household waste. For labelled components such as for example fans, the disassembly instructions can be found on the component manufacturer's homepage.



Get In Touch



Call: [0845 6880112](tel:08456880112)



Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

4 Product information

4.1 General

This manual concerns KVK Slim 200–500, KVK Slim 200–500 EC, KVK Silent 200–500, KVK Silent 200–500 EC manufactured by Systemair Sverige AB.

The EC-fans are delivered with potentiometer, 0–10 V. The integrated potentiometer is factory preset to 10 V. This value can be changed manually to obtain a different motor rpm/fan performance. Fan performance charts for this purpose are shown in the table by voltage steps (chapter 4.2.2). An external potentiometer or other controller can be connected if necessary. If so the internal potentiometer needs to be disconnected from the connection terminals.

This manual consists of basic information and recommendations concerning the design, installation, start-up and operation, to ensure a proper fail-free operation of the unit. The key to proper and safe operating of the unit is to read this manual thoroughly, use the unit according to given guidelines and follow all safety requirements.

The KVK Slim 200–500, KVK Slim 200–500 EC, KVK Silent 200–500, KVK Silent 200–500 EC are intended for transportation of air in air handling systems. The fans are meant for use in ducted systems and should always be duct connected on the inlet side. No moving parts shall be accessible after installation. KVK Slim 200–500, KVK Slim 200–500 EC, KVK Silent 200–500, KVK Silent 200–500 EC are adapted to continuous operation.



Danger

- The fans are not to be used in hazardous environments or connected to flue ducts.
- The appliance must be connected to a mains circuit breaker in the fixed installation.
- Switch power off (all-pole circuit breaker) before servicing or maintenance, and make sure the impeller has come to standstill.
- Make sure protection grid has been installed (EN ISO 13857), no moving parts shall be accessible after installation.
- Do not remove, short-circuit or disconnect safety accessories (i.e. motor protection, safety grille).



Warning

- The fans can have sharp edges and corners which may cause injuries. Be careful when opening the fans, the motor assembled on the motor bracket is relatively heavy.



Caution

- Take precautions to prevent the back flow of exhaust gases from flues from other appliances installed in the same room, which are fired by gas or other fuels.

Get In Touch

- Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

4.2 Technical data

4.2.1 Dimensions

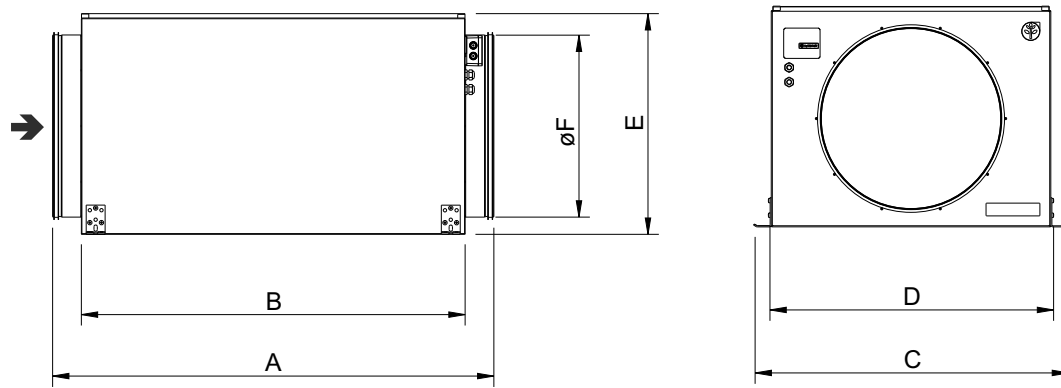


Fig. 1 KVK Slim

Model	A	B	C	D	E	øF
KVK Slim 200 EC	620	542	513	415	270	200
KVK Slim 200	620	542	513	415	270	200
KVK Slim 250 EC	773	657	548	450	300	250
KVK Slim 250	773	657	548	450	300	250
KVK Slim 315	945	825	694	590	451	315
KVK Slim 315 EC	866	746	694	590	414	315
KVK Slim 355	961	842	870	766	496	355
KVK Slim 355 EC	976	842	770	666	459	355
KVK Slim 400	1001	842	870	766	496	400
KVK Slim 400 EC	1001	842	770	666	459	400
KVK Slim 500 EC	1213	1055	873	768	605	500
KVK Slim 500	1213	1055	873	768	605	500

Get In Touch

Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

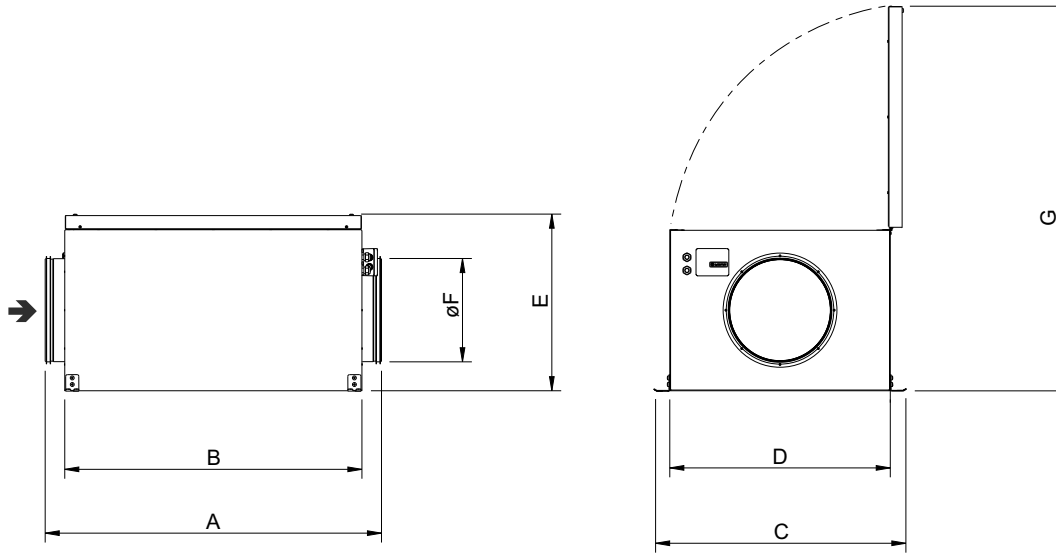


Fig. 2 KVK Silent

Model	A	B	C	D	E	øF	G
KVK Silent 200 EC	682	604	596	500	352	200	810
KVK Silent 200	682	604	596	500	352	200	810
KVK Silent 250 EC	836	720	630	533	382	250	872
KVK Silent 250	836	720	630	533	382	250	872
KVK Silent 315	1022	906	768	672	536	315	1165
KVK Silent 315 EC	946	826	768	672	493	315	1125
KVK Silent 355	1041	922	952	848	578	355	1383
KVK Silent 355 EC	1041	922	852	748	538	355	1045
KVK Silent 400	1082	922	952	848	578	400	1383
KVK Silent 400 EC	1082	922	852	748	538	400	1045
KVK Silent 500 EC	1292	1134	940	850	680	500	1486
KVK Silent 500	1292	1134	940	850	680	500	1486

Get In Touch

Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk







Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
 Settle, North Yorkshire, BD24 9RH

4.2.2 Performance

EC fans can be regulated with the enclosed potentiometer, the following diagrams show the performance on different fan curves.

Table 1 EC-fans

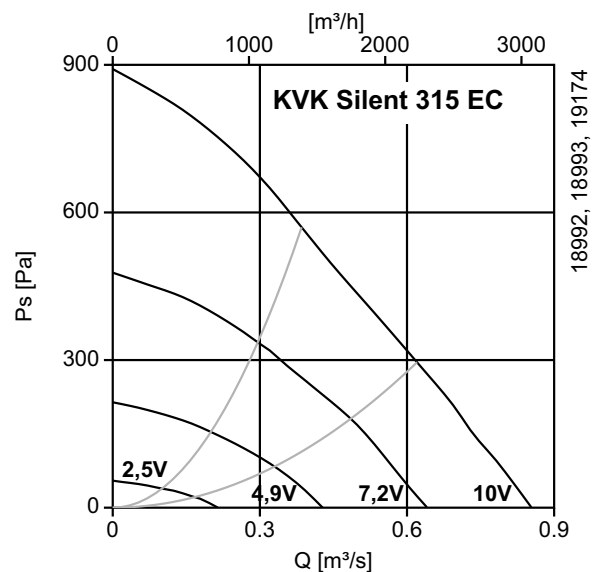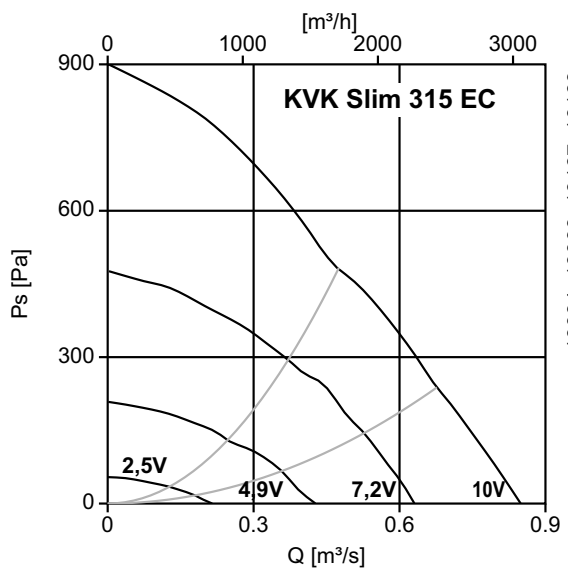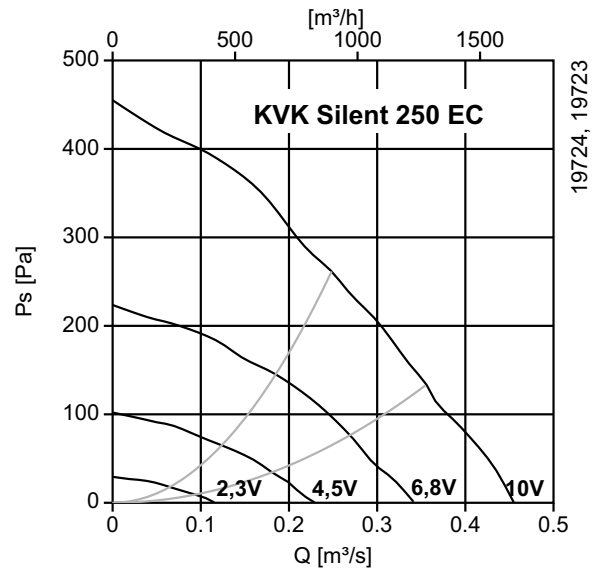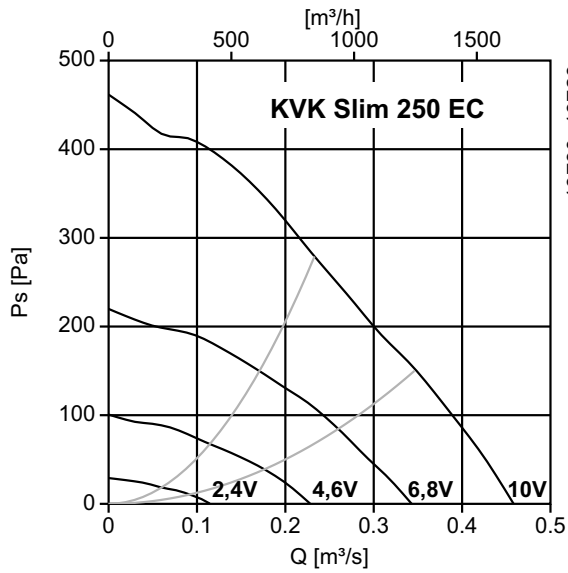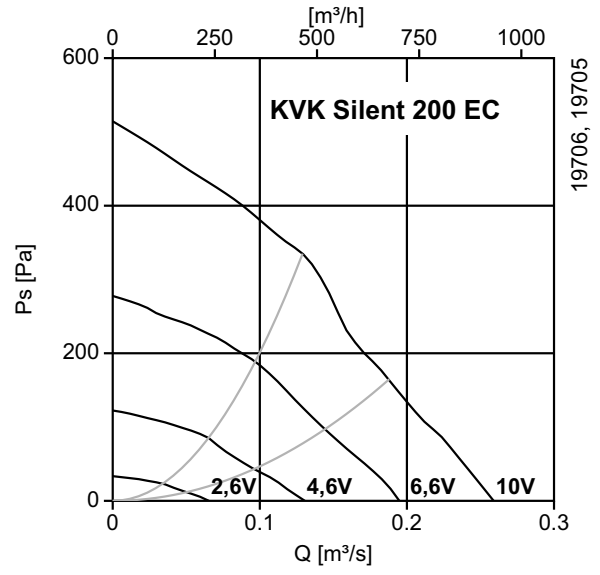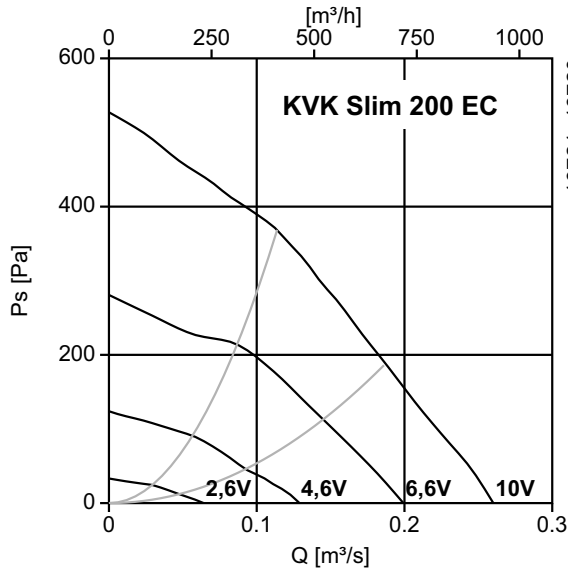

145899 | A007

Get In Touch







Call: 0845 6880112
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
 Settle, North Yorkshire, BD24 9RH



EC-fans cont'd

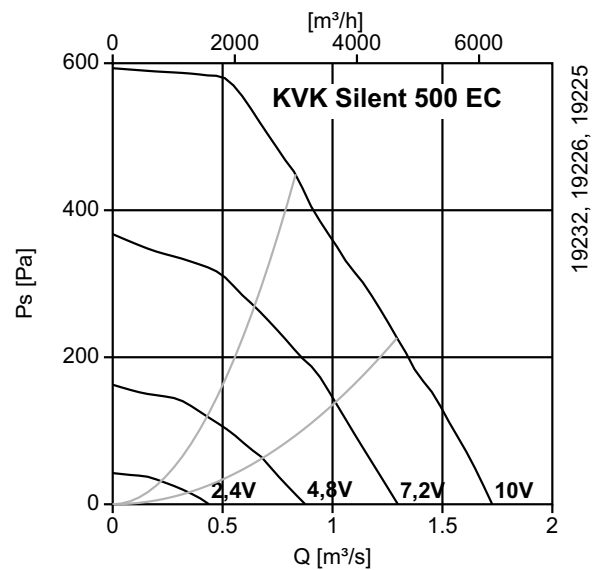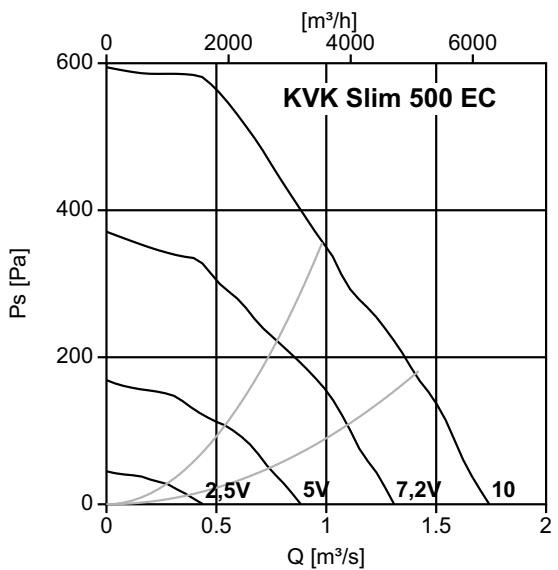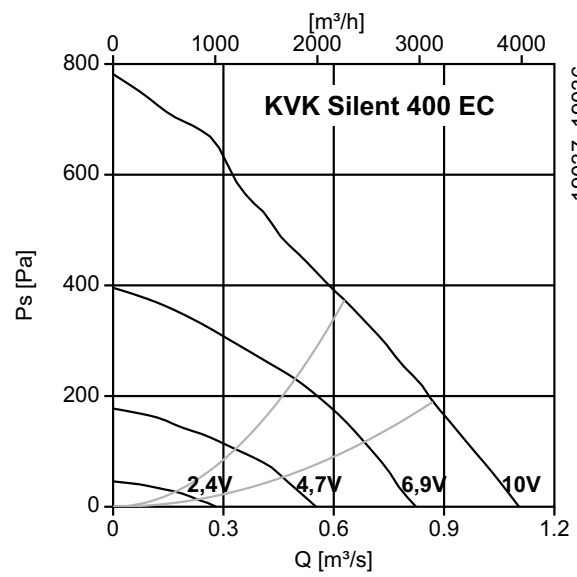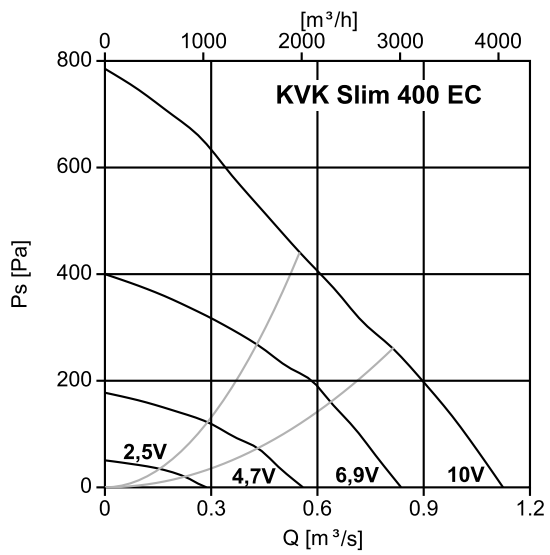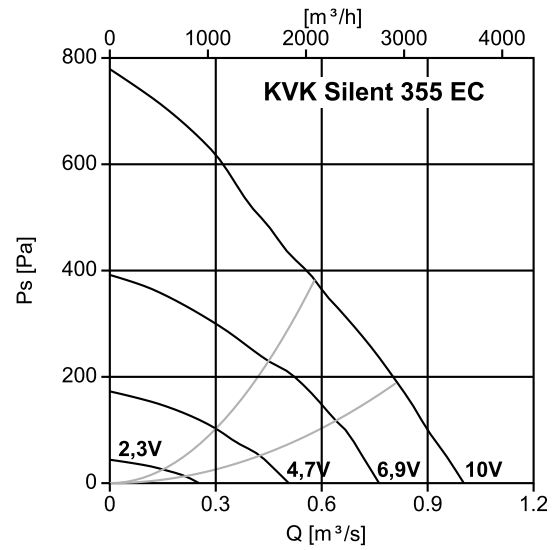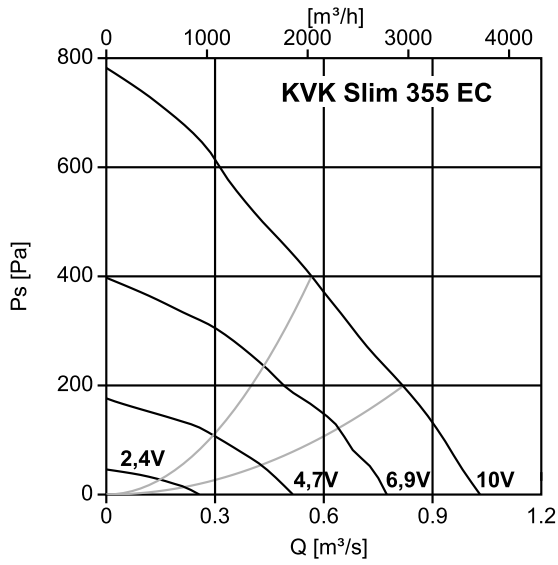

145899 | A007



Get In Touch

Call: 0845 6880112
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
 Settle, North Yorkshire, BD24 9RH



4.2.3 Wiring diagram

Modbus communication is possible for 315–500 EC, see wiring diagram.

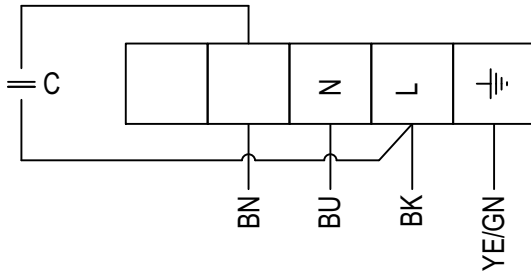


Fig. 3 KVK 200, 250, 315 Slim/Silent

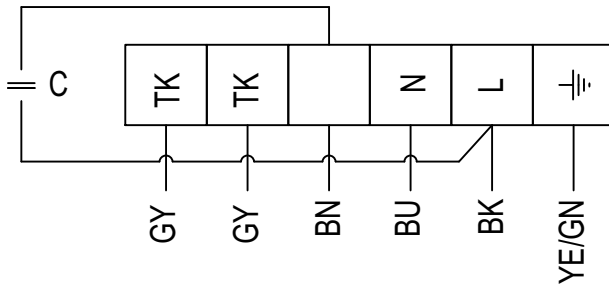


Fig. 4 KVK 355-500 Slim/Silent

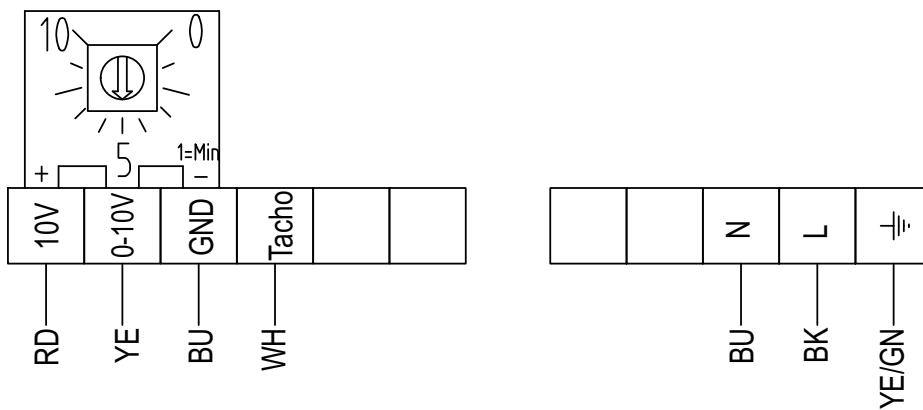


Fig. 5 KVK 200-250 Slim/Silent EC

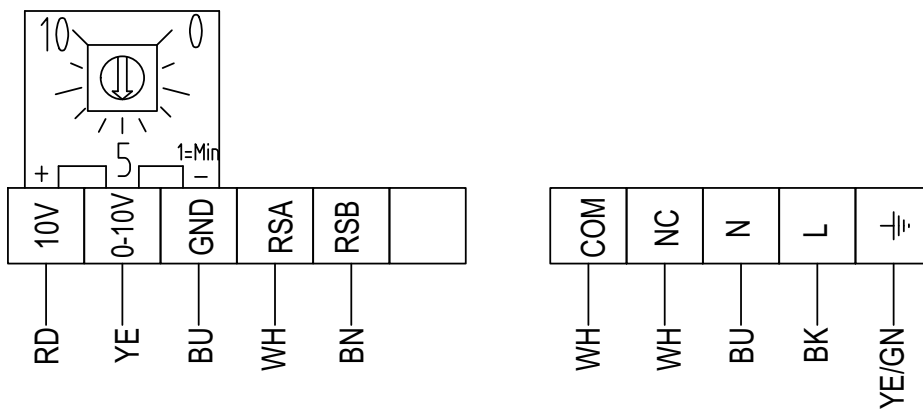


Fig. 6 KVK 315-500 Slim/Silent EC

RD	Red
YE	Yellow
BU	Blue
WH	White

GN	Green
BN	Brown
BK	Black
GY	Gray

4.3 Transportation and storage

All fans are packaged at the factory to withstand normal transport handling. When handling the goods use suitable lifting equipment in order to avoid damage to fans and personnel. Avoid blows and shock loads. Store the fans in a dry place protected from weather and dirt until final installation.



Warning

- The unit is heavy. Be careful during transport and installation. Risk of injury through pinching. Use protective clothing.
- Do not lift the fans by the connecting cable, connection box, motor bracket, impeller or inlet cone.

5 Installation



Danger

- Make sure that the mains supply to the unit is disconnected before performing any maintenance or electrical work!
- All electrical connections must be carried out by an authorized installer and in accordance with local rules and regulations.



Warning

- The units electrical connection to the mains supply must be preceded by an all pole circuit breaker with a minimum 3 mm gap.
- Do not lift the fans by the connecting cable, connection box, motor bracket, impeller or inlet cone.

The fan can be installed in any directions. Mounting brackets and screws are delivered in the box together with the fan.



Make sure the assembly of the fan is firmly fixed and stable. The fans must be installed to ensure that service and maintenance can be performed easily and safely. Disturbing noise can be reduced by installing silencers (available as an accessory). Electrical connections are made according to the wiring diagram in the terminal box, markings on terminal blocks or on cable.

The connection box is mounted on a short cable for optional mounting on the casing of the fan (short or long side).



Fig. 7

Get In Touch

-  Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

5.1 Commissioning



Danger

- All electrical connections must be carried out by an authorized installer and in accordance with local rules and regulations.

Before initial operation, check the following:

- Electrical connection has been properly completed.
- Protective earth has been connected.
- Safety devices in place (protection grid).
- Leftover installation materials and foreign materials have been removed from the casing.

Testing the installation:

- Adjustment may be required in the electrical compartment during test (i.e. changing of the potentiometer), however during operation the lid must be closed.

When putting into operation, check the following:

- Connection data corresponds to the specifications on the nameplate: Maximum voltage +6%, -10%, according to IEC 38. Rated current must not be exceeded with more than 5% at rated voltage.
- Smoothness of motor operation, (no abnormal noises).

Sound levels exceeding 70 dB(A) may occur depending on size (see www.systemair.com for detailed information).

6 Maintenance

6.1 Important



Danger

- Make sure that the mains supply to the unit is disconnected before performing any maintenance or electrical work!
- Fan impeller has come to a complete standstill.
- Should the supply cable be damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- The unit is heavy. Be careful during transport and installation. Risk of injury through pinching. Use protective clothing.
- Do not lift the fans by the connecting cable, connection box, motor bracket, impeller or inlet cone.

6.2 Cleaning the fan



Warning

- Make sure that the mains supply to the unit is disconnected before performing any maintenance or electrical work!
- Fan impeller has come to a complete standstill.



Caution

- Beware of sharp edges during maintenance, use protective gloves. Risk of injury through pinching.

The fan should be cleaned when necessary, at least once a year to avoid imbalance and unnecessary damage to the bearings. The fan bearings are maintenance free and should only be replaced if damaged. Do not use a high-pressure cleaner (steam jet) when cleaning the fan. Ensure that the fan impeller's balance weights are not moved or the fan impeller distorted. Listen for abnormal operating noise.

Get In Touch

- Call: [0845 6880112](tel:08456880112)
 Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH

7 Troubleshooting

The following applies in case the fan has stopped:

- Try to restart the fan by cutting the power a couple of minutes.
- Ensure that the impeller is not locked. Disconnect the power supply, remove any obstacles. Check that the fan starts after reconnecting the current. Should the fan not start please contact your place of purchase.

8 Deinstallation/dismantling

Deinstall and dismantle the fan in reverse order of installation and electrical connection

9 Disposal

- ◆ Ensure material is recycled. Observe national regulations.
- ◆ The device and the transport packaging are predominantly made from recyclable raw materials.
- ◆ Disassemble the fan into its components.
- ◆ Separate the parts according to:
 - reusable material
 - material groups to be disposed of (metal, plastics, electrical parts, etc.)

Get In Touch



Call: [0845 6880112](tel:08456880112)



Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH



Systemair Sverige AB
Industrivägen 3
SE-739 30 Skinnskatteberg, Sweden

Phone +46 222 440 00
Fax +46 222 440 99

www.systemair.com

Get In Touch



Call: [0845 6880112](tel:08456880112)



Email: info@adremit.co.uk

Our Address

Puravent, Adremit Limited, Unit 5a, Commercial Yard,
Settle, North Yorkshire, BD24 9RH